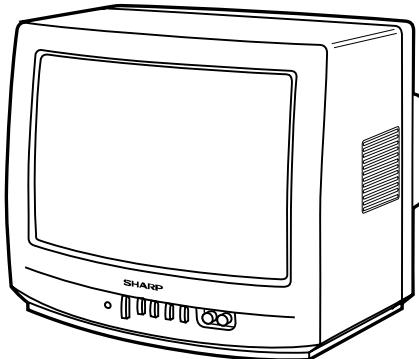


SHARP**SERVICE MANUAL**

SX0K513N-M100

**MODELS****13N-M100B/150B
CN13M10B****COLOR TELEVISION****Chassis No. SN-010**

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

CONTENTS

	Page
• ELECTRICAL SPECIFICATIONS	1
• IMPORTANT SERVICE SAFETY PRECAUTION	2
• LOCATION OF USER'S CONTROL	6
• INSTALLATION AND SERVICE INSTRUCTIONS	7
• CHASSIS LAYOUT	13
• BLOCK DIAGRAM	14
• SCHEMATIC DIAGRAMS	15
• PRINTED WIRING BOARD ASSEMBLIES	21
• REPLACEMENT PARTS LIST	24
• PACKING OF THE SET	31

ELECTRICAL SPECIFICATIONS

POWER INPUT	120 V AC 60 Hz
POWER RATING	53 W
PICTURE SIZE	580cm ² (89.8sq inch)
CONVERGENCE	Magnetic
SWEEP DEFLECTION	Magnetic
FOCUS	Hi-Bi-Potential Electrostatic
INTERMEDIATE FREQUENCIES	
Picture IF Carrier Frequency	45.75 MHz
Sound IF Carrier Frequency	41.25 MHz
Color Sub-Carrier Frequency	42.17 MHz (Nominal)
AUDIO POWER	
OUTPUT RATING	0.9W (at 10% distortion)

SPEAKER	
SIZE	8 cm (Round)
VOICE COIL IMPEDANCE	32 ohm at 400 Hz
ANTENNA INPUT IMPEDANCE	
VHF/UHF	75 ohm Unbalanced
TUNING RANGES	
VHF-Channels	2 thru 13
UHF-Channels	14 thru 69
CATV Channels	1 thru 125
	(EIA, Channel Plan U.S.A.)

Specifications are subject to change without prior notice.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.


IMPORTANT SERVICE SAFETY PRECAUTION

- Service work should be performed only by qualified service technicians who are thoroughly familiar with all safety checks and the servicing guidelines which follow:

WARNING

1. For continued safety, no modification of any circuit should be attempted.
2. Disconnect AC power before servicing.
3. Semiconductor heat sinks are potential shock hazards when the chassis is operating.
4. The chassis in this receiver has two ground systems which are separated by insulating material. The non-isolated (hot) ground system is for the B+ voltage regulator circuit and the horizontal output circuit. The isolated ground system is for the low B+ DC voltages and the secondary circuit of the high voltage transformer.

To prevent electrical shock use an isolation transformer between the line cord and power receptacle, when servicing this chassis.

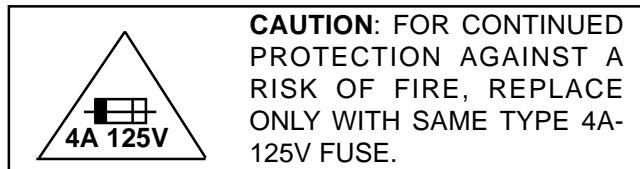

SERVICING OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove the static charge by connecting a 10k ohm resistor in series with an insulated wire (such as a test probe) between the picture tube ground and the anode lead. (AC line cord should be disconnected from AC outlet.)

1. Picture tube in this receiver employs integral implosion protection.
2. Replace with tube of the same type number for continued safety.
3. Do not lift picture tube by the neck.
4. Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage anode completely.

X-RADIATION AND HIGH VOLTAGE LIMITS

1. Be sure all service personnel are aware of the procedures and instructions covering X-radiation. The only potential source of X-ray in current solid state TV receivers is the picture tube. However, the picture tube does not emit measurable X-Ray radiation, if the high voltage is as specified in the "High Voltage Check" instructions.
It is only when high voltage is excessive that X-radiation is capable of penetrating the shell of the picture tube including the lead in the glass material. The important precaution is to keep the high voltage below the maximum level specified.
2. It is essential that servicemen have available at all times an accurate high voltage meter.
The calibration of this meter should be checked periodically.
3. High voltage should always be kept at the rated value –no higher. Operation at higher voltages may cause a failure of the picture tube or high voltage circuitry and;also, under certain conditions, may produce radiation in exceeding of desirable levels.
4. When the high voltage regulator is operating properly there is no possibility of an X-radiation problem. Every time a color chassis is serviced, the brightness should be tested while monitoring the high voltage with a meter to be certain that the high voltage does not exceed the specified value and that it is regulating correctly.
5. Do not use a picture tube other than that specified or make unrecommended circuit modifications to the high voltage circuitry.
6. When trouble shooting and taking test measurements on a receiver with excessive high voltage, avoid being unnecessarily close to the receiver.
Do not operate the receiver longer than is necessary to locate the cause of excessive voltage.

IMPORTANT SERVICE SAFETY PRECAUTION

(Continued)

BEFORE RETURNING THE RECEIVER

(Fire & Shock Hazard)


Before returning the receiver to the user, perform the following safety checks.

1. Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.
2. Inspect all protective devices such as non-metallic control knobs, insulating materials, cabinet backs, adjustment and compartment covers or shields, isolation resistor-capacity networks, mechanical insulators and etc.
3. To be sure that no shock hazard exists, check for leakage current in the following manner.
 - Plug the AC cord directly into a 120 volt AC outlet, (Do not use an isolation transformer for this test).
 - Using two clip leads, connect a 1.5k ohm, 10 watt resistor paralleled by a $0.15\mu\text{F}$ capacitor in series with all exposed metal cabinet parts and a known earth ground, such as electrical conduit or electrical ground connected to earth ground.
 - Use an AC voltmeter having with 5000 ohm per volt, or higher, sensitivity to measure the AC voltage drop across the resistor.

- Connect the resistor connection to all exposed metal parts having a return to the chassis (antenna, metal cabinet, screw heads, knobs and control shafts, escutcheon and etc.) and measure the AC voltage drop across the resistor.

All checks must be repeated with the AC line cord plug connection reversed. (If necessary, a non-polarized adapter plug must be used only for the purpose of completing these check.)

Any current measured must not exceed 0.5 milliamp. Any measurements not within the limits outlined above indicate of a potential shock hazard and corrective action must be taken before returning the instrument to the customer.

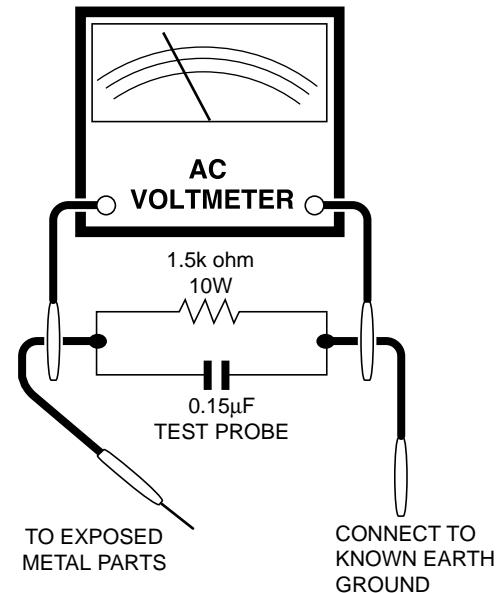

SAFETY NOTICE

Many electrical and mechanical parts in television receivers have special safety-related characteristics. These characteristics are often not evident from visual inspection, nor can protection afforded by them be necessarily increased by using replacement components rated for higher voltage, wattage, etc.

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "" and shaded areas in the Replacement Parts Lists and Schematic Diagrams.


For continued protection, replacement parts must be identical to those used in the original circuit. The use of substitute replacement parts which do not have the same safety characteristics as the factory recommended replacement parts shown in this service manual, may create shock, fire, X-radiation or other hazards.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

- Ne peut effectuer la réparation qu' un technicien spécialisé qui s'est parfaitement accoutumé à toute vérification de sécurité et aux conseils suivants.

AVERTISSEMENT

1. N'entreprendre aucune modification de tout circuit. C'est dangereux.
2. Débrancher le récepteur avant toute réparation.
3. Les déversoirs thermiques à semi-conducteurs peuvent présenter un danger de choc électrique lorsque le récepteur est en marche.
4. Le châssis de ce récepteur possède deux systèmes de masse qui sont séparées par du matériel d'isolation. Le système de masse non-isolée (sous tension) est pour le circuit du régulateur de tension B+ et le circuit de sortie horizontale. Le système de masse isolée est pour les tensions DC B+ basses et le circuit secondaire du transformateur haute tension. Pour éviter tout risque d'électrocution lors de l'entretien de ce châssis, utiliser un transformateur d'isolation entre le cordon de ligne et la prise de courant.

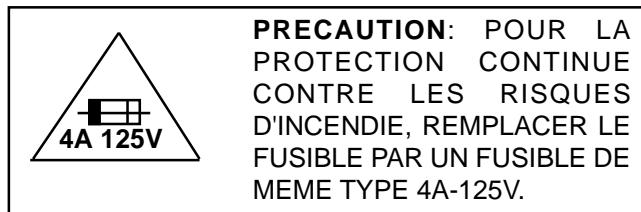

REPARATION DU SYSTEME A HAUTE TENSION ET DU TUBE-IMAGE

Lors de la réparation de ce système, supprimer la charge statique en branchant une résistance de $10\text{ k}\Omega$ en série avec un fil isolé (comme une sonde d'essai) entre la mise à la terre du tube-image et le fil d'anodel. (Le cordon d'alimentation doit être retiré de la prise murale.)

1. Le tube image dans ce récepteur emploie une protection intégrée contre l'implosion.
2. Par mesure de sécurité, changer le tube-image pour un tube du même numéro de type.
3. Ne pas lever le tube-image par son col.
4. Ne manipuler le tube-image qu'en portant des lunettes incassables et qu'après avoir déchargé totalement la haute tension.

LIMITES DES RADIATIONS X ET DE LA HAUTE TENSION

1. Tout le personnel réparateur doit être instruit des instructions et procédés relatifs aux radiations X. Le tube-image, seule source de rayons X dans les téléviseurs transistorisés, n'émet pourtant pas de rayons mesurables si la haute tension est maintenue à un niveau préconisé dans la section "Vérification de la haute tension". C'est seulement quand la haute tension est excessive que les rayons X peuvent entrer dans l'enveloppe du tube-image y compris le conducteur de verre. Il est important de maintenir la haute tension en-dessous du niveau spécifié.
2. Il est essentiel que le réparateur ait sous la main un voltmètre à haute tension qui doit être périodiquement étalonné.
3. La haute tension doit toujours être maintenue à la valeur de régime -et pas plus haute. L'opération à des tensions plus élevées peut entraîner une panne du tube-image ou du circuit à haute tension et, dans certaines conditions, peut entraîner une radiation dépassant les niveaux prescrits.
4. Quand le régulateur à haute tension fonctionne correctement, il n'y a aucun problème de radiation X. Chaque fois qu'un châssis couleurs est réparé, la luminosité doit être examinée bout en contrôlant la haute tension à l'aide d'un voltmètre pour s'assurer que la haute tension ne dépasse pas la valeur spécifiée et qu'elle soit correctement réglée.
5. Ne pas utiliser un tube-image autre que celui spécifié et ne pas effectuer de modifications déconseillées du circuit à haute tension.
6. Lors de la recherche des pannes et des mesures d'essai sur un récepteur qui présente une haute tension excessive, éviter de s'approcher inutilement du récepteur.
Ne pas faire fonctionner le récepteur plus longtemps que nécessaire pour localiser la cause de la tension excessive.

PRECAUTIONS A PRENDRE LORS DE LA REPARATION

(Suite)

VERIFICATIONS CONTRE L'INCENDIE ET LE CHOC ELECTRIQUE


Avant de rendre le récepteur à l'utilisateur, effectuer les vérifications suivantes.

1. Inspecter tous les faisceaux de câbles pour s'assurer que les fils ne soient pas pincés ou qu'un outil ne soit pas placé entre le châssis et les autres pièces métalliques du récepteur.
2. Inspecter tous les dispositifs de protection comme les boutons de commande non-métalliques, les isolants, le dos du coffret, les couvercles ou blindages de réglage et de compartiment, les réseaux de résistance-capacité, les isolateurs mécaniques, etc.
3. S'assurer qu'il n'y ait pas de danger d'électrocution en vérifiant la fuite de courant, de la façon suivante:
 - Brancher le cordon d'alimentation directement à une prise de courant de 120V. (Ne pas utiliser de transformateur d'isolation pour cet essai).
 - A l'aide de deux fils à pinces, brancher une résistance de 1,5 kΩ 10 watts en parallèle avec un condensateur de 0,15µF en série avec toutes les pièces métalliques exposées du coffret et une terre connue comme une conduite électrique ou une prise de terre branchée à la terre.
 - Utiliser un voltmètre CA d'une sensibilité d'au moins 5000Ω/V pour mesurer la chute de tension en travers de la résistance.

- Toucher avec la sonde d'essai les pièces métalliques exposées qui présentent une voie de retour au châssis (antenne, coffret métallique, tête des vis, arbres de commande et des boutons, écusson, etc.) et mesurer la chute de tension CA en-travers de la résistance. Toutes les vérifications doivent être refaites après avoir inversé la fiche du cordon d'alimentation. (Si nécessaire, une prise d'adaptation non polarisée peut être utilisée dans le but de terminer ces vérifications.)

Tous les courants mesurés ne doivent pas dépasser 0,5 mA.

Dans le cas contraire, il y a une possibilité de choc électrique qui doit être supprimée avant de rendre le récepteur au client.

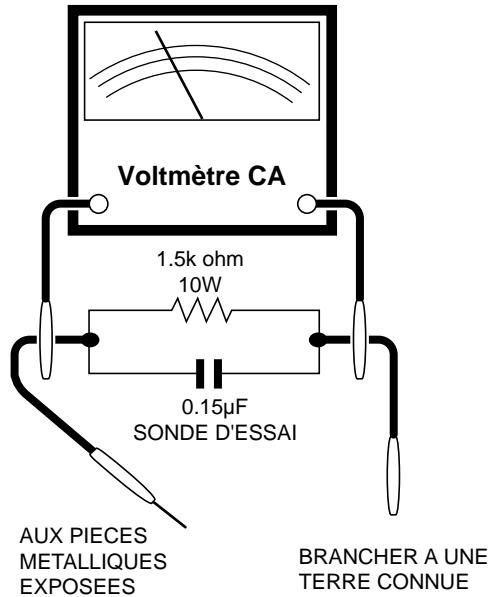

AVIS POUR LA SECURITE

De nombreuses pièces, électriques et mécaniques, dans les téléviseurs présentent des caractéristiques spéciales relatives à la sécurité, qui ne sont souvent pas évidentes à vue. Le degré de protection ne peut pas être nécessairement augmenté en utilisant des pièces de remplacement étalonnées pour haute tension, puissance, etc.


Les pièces de remplacement qui présentent ces caractéristiques sont identifiées dans ce manuel; les pièces électriques qui présentent ces particularités sont

identifiées par la marque "⚠" et hachurées dans la liste des pièces de remplacement et les diagrammes schématiques.

Pour assurer la protection, ces pièces doivent être identiques à celles utilisées dans le circuit d'origine. L'utilisation de pièces qui n'ont pas les mêmes caractéristiques que les pièces recommandées par l'usine, indiquées dans ce manuel, peut provoquer des électrocutions, incendies, radiations X ou autres accidents.

LOCATION OF USER'S CONTROL

Front Panel

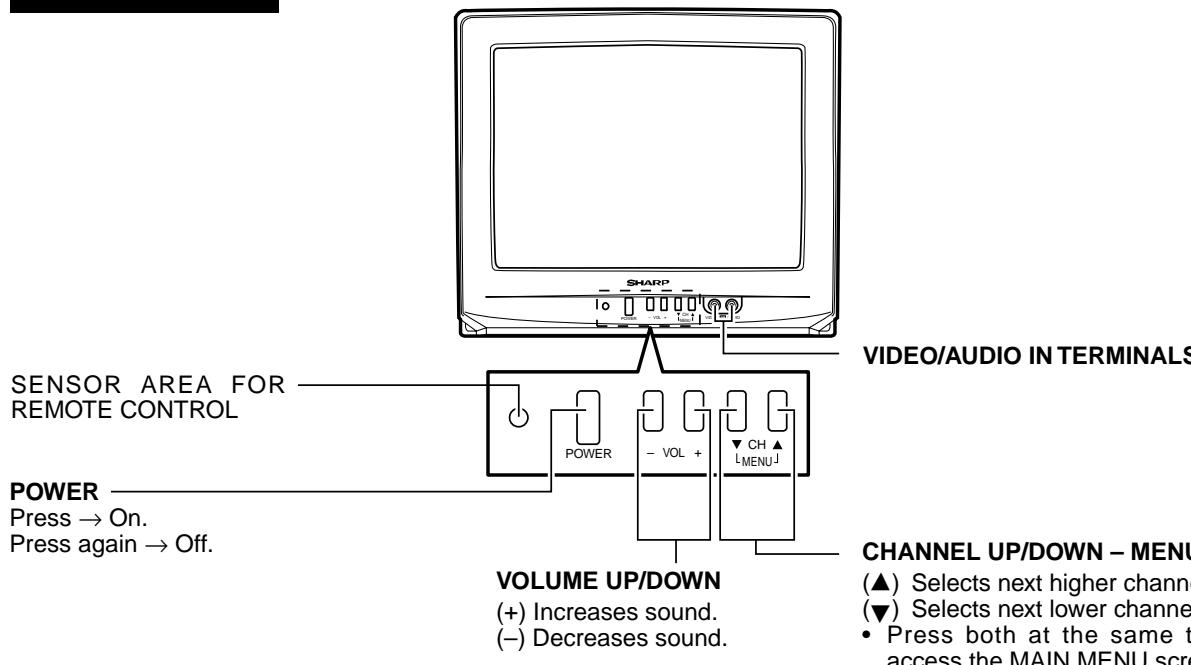

SENSOR AREA FOR
REMOTE CONTROL

POWER
Press → On.
Press again → Off.

VOLUME UP/DOWN

(+) Increases sound.
(-) Decreases sound.

VIDEO/AUDIO IN TERMINALS

CHANNEL UP/DOWN – MENU

- (▲) Selects next higher channel.
- (▼) Selects next lower channel.
- Press both at the same time to access the MAIN MENU screen.

Basic Remote Control Functions


POWER
Press → On.
Press again → Off.

REMOTE KEYPAD
Accesses any channel from keypad.

FLASHBACK
Returns to previous channel.

VOLUME UP/DOWN
(+) Increases sound.
(-) Decreases sound.
• In menu mode, changes or selects the TV adjustments.

MUTE
Press → Mutes sound.
Press again → Restores sound.
• CLOSED CAPTION appears when sound is muted.

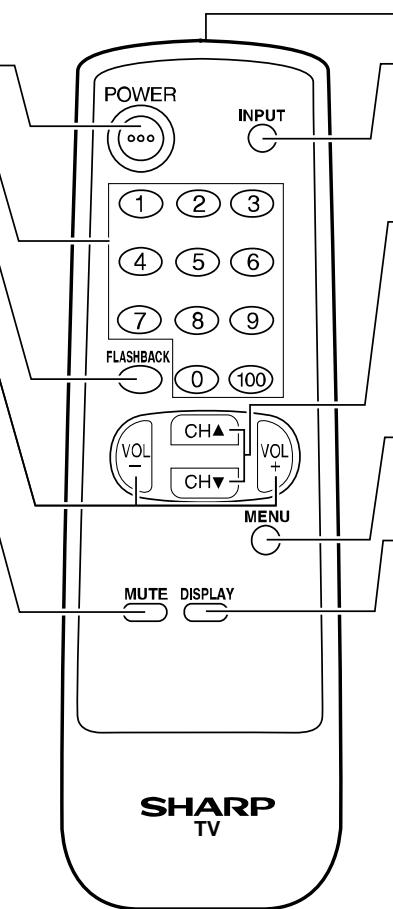

Infrared Transmitter Window

INPUT
Press → Switch to external video input mode.
Press again → Switch to TV mode.

CHANNEL UP/DOWN

- (▲) Selects next higher channel.
- (▼) Selects next lower channel.
- Moves the "◆" mark of the MENU screen.

MENU
Press → Accesses MAIN MENU.
Press again → Exits MAIN MENU.

DISPLAY
Press → Displays receiving channel for four seconds.
Press again → Removes display.
• Temporarily displays receiving channel when in Closed Caption mode.

INSTALLATION AND SERVICE INSTRUCTIONS

- Note:**
- (1) When performing any adjustments to resistor controls and transformers use non-metallic screwdrivers or TV alignment tools.
 - (2) Before performing adjustments, the TV set must be on at least 15 minutes.

CIRCUIT PROTECTION

The receiver is protected by a 4.0A fuse (F701), mounted on PWB-A, wired into one side of the AC line input.

X-RADIATION PROTECTOR CIRCUIT TEST

After service has been performed on the horizontal deflection system, high voltage system, B+ system, test the X-Radiation protection circuit to ascertain proper operation as follows:

1. Apply 120V AC using a variac transformer for accurate input voltage.
2. Allow for warm up and adjust all customer controls for normal picture and sound.
3. Receive a good local channel.
4. Connect a digital voltmeter to TP653 and make sure that the voltmeter reads $21.1 \pm 1.5V$.
5. Apply external 27.9V DC at TP653 by using an external DC supply, TV must be shut off.
6. To reset the protector, unplug the AC cord and make a short circuit between TP651 and TP652. Now make sure that normal picture appears on the screen.
7. If the operation of the horizontal oscillator does not stop in step 5, the circuit must be repaired before the set is returned to the customer.

HIGH VOLTAGE CHECK

High voltage is not adjustable but must be checked to verify that the receiver is operating within safe and efficient design limitations as specified checks should be as follows:

1. Connect an accurate high voltage meter between ground and anode of picture tube.
2. Operate receiver for at least 15 minutes at 120V AC line voltage, with a strong air signal or a properly tuned in test signal.
3. Enter the service mode and select the service adjustment "S03" and Bus data "01" (Y-mute on).
4. The voltage should be approximately, 24.0kV (at zero beam).

If a correct reading cannot be obtained, check circuitry for malfunctioning components. After the voltage test, make Y-mute off to the normal mode.

For adjustments of this model, the bus data is converted to various analog signals by the D/A converter circuit.

Note: There are still a few analog adjustments in this series such as focus and master screen voltage. Follow the steps below whenever the service adjustment is required.

To enter the service mode and exit service mode.

While pressing the Vol-up and Ch-up buttons at the sametime, plug the AC cord into a wall socket.

Now, the TV set is switched on and enters the service mode.

To exit the service mode, turn the television off by pressing the power button.

1. Service mode.

Before putting unit into the service mode, check that customer adjustments are in the normal mode. Use the reset function in the video adjustment menu to ensure customer control are in their proper (reset) position.

2. Service number selection.

In the service mode, you will see the window screen as window ①. There are 3 adjustment categories ②DEF, ③SIGNAL, ④FIX VALUE as show in **Figure A**.

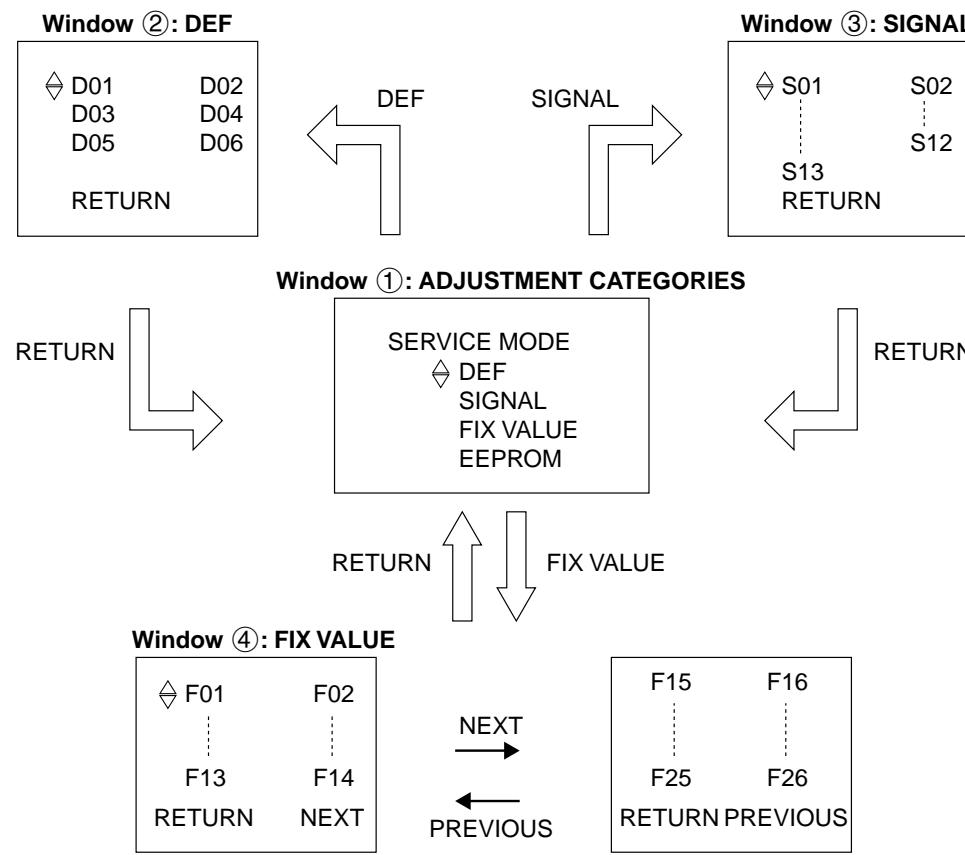


Figure A: ADJUSTMENT CATEGORIES

Press CH UP/DOWN button for selection and enter by VOL UP or VOL DOWN.

Press CH UP/DOWN button to select the adjustment item and VOL UP/DOWN to adjust the data number for each categories.

(OSD disturbance can be erased by R/C display key)

(Note: EEPROM-factory used only)

Below are the adjustments ranges and initial values for FIX VALUE category.

FIX VALUE

SERVICE POSITION	ADJUST ITEM	DATA		
		RANGE	INITIAL VALUE	(Hex)
F01	OPTION 1	00-FF	B0	*
F02	OPTION 2	00-FF	04	04
F03	E-SAVE	00-3F	23	2A
F04	TUNER SETUP	00, 01	00	00
F05	R-TONE RD	00-7F	19	03
F06	R-TONE BD	00-7F	00	7C
F07	B-TONE RD	00-7F	00	00
F08	B-TONE BD	00-7F	12	04
F09	FM LEVEL	00-1F	0C	0C
F10	AFC GAIN	00, 01	00	00
F11	G DRIVE	00, 0F	00	0F
F12	FBT BLK SW	00,01	01	01
F13	V COMP	00-07	07	07
F14	OSD CONT	00-03	02	01
F15	SHARPNESS	00-3F	19	19
F16	FLT SYS	00-07	00	00
F17	KILLER OP	00-07	04	02
F18	PRE SHOOT	00-03	03	00
F19	CORING	00-03	04	04
F20	DC REST	00-03	02	02
F21	BS START	00-03	01	01
F22	BS GAIN	00-03	01	01
F23	ABL START	00-07	00	00
F24	R/B ANGLE	00-0F	08	08
F25	H BLK R	00-0F	04	03
F26	H BLK L	00-0F	04	06

* Must be "B0" for 13N-M100B/150B, "A0" for CN13M10B

Table - A

Below are the ranges and initial values for each adjustment and in each categories.

DEF

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
D01	H-PHASE	00-1F	0C	
D02	V-SIZE	00-7F	40	
D03	V-POSITION	00-3F	20	Must be "20"
D04	CC-POSITION	00-FF	1A	
D05	V-LINEARITY	00-1F	10	Must be "12"
D06	V-S-CORRECTION	00-1F	10	Must be "0F"

Table - B

SIGNAL

SERVICE POSITION	ADJUST ITEM	DATA		ADJUSTMENT CONTENTS
		RANGE	INITIAL VALUE	
S01	RF AGC	00-3F	14	
S02	VIDEO LEVEL	00-07	03	
S03	Y-MUTE	00-03	00	"01": Y-MUTE, "02": V-STOP & Y-MUTE "03": Activate color killer circuit.
S04	SUB BIAS	00-FF	40	Must be "60"
S05	R-BIAS	00-FF	00	
S06	G-BIAS	00-FF	00	
S07	B-BIAS	00-7F	00	
S08	R-DRIVE	00-7F	40	
S09	B-DRIVE	00-7F	40	
S10	CONTRAST	00-7F	5A	
S11	TINT	00-7F	40	
S12	COLOR	00-7F	40	
S13	BRIGHTNESS	00-7F	40	

Note: Refer to the SERVICE ADJUSTMENT for each corresponding values.

Table - C

Holding down both the Vol-up/Ch-down buttons on the TV set at service mode for more than 2 seconds will automatically write the above initial values into IC2101.

PART REPLACED	ADJUSTMENT		NOTES
	NECESSARY	UNNECESSARY	
IC2001		X	Data is stored in IC2101.
IC201	X		The adjustment is needed to compensate for characteristics of parts including IC201.
IC2101	X		Holding down both the Vol-up/Ch-down buttons on the TV set in the service mode for more than 2 seconds will automatically write the above initial values into IC2101.
CRT	X		Adjust items related to picture tube only.

Table - D

■ SERVICE ADJUSTMENT

Note: Before making the service adjustment, make the bus data settings.

+B Adjustment

1. Receive a good local channel.
2. Select VIDEO ADJUSTMENT RESET on the menu to get the video reset.
3. Connect a DC voltmeter between the +B line (at SW transformer) of R611 and the ground terminal.
4. Adjust R738 so that the voltmeter should read $130 \pm 0.5V$.

RF AGC Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S01".
3. Set the data value to point where no noise or beat appears.
4. Select another channel to confirm that no noise or beat appears.

Note: You have to exit the service mode first to select another channel.

Video Level (TV Det Video Level) Adjustment

1. Receive a good local channel.
2. Enter the service mode signal category and select the service adjustment "S02".
3. Set the data value to "02" first, then adjust the data in ranges 02 ± 2 step to obtain a normal contrast level.

Screen adjustment

1. Connect to oscilloscope probe between TP855 and ground of the CRT unit.
2. Receive a good local channel.
3. Enter the service mode Signal category and set the service adjustment "S04" to step 60. Then select the service adjustment "S12" and set the data value to "00" to set the color level to the minimum level. (record the original data first). You may skip this step, if you selected a B/W picture or monoscope pattern. Set also the "S05/S06/S07" data to minimum level.
4. Select the service adjustment "S03" and set the data value to "01" to turn off the luminance signal (Y-mute).
5. Select the service adjustment "S13" and adjust the data value to obtain 2.40 volts as shown in **Figure B**.

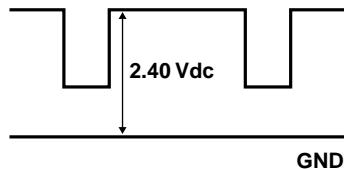


Figure B: WAVEFORM FOR SCREEN ADJUSTMENT

6. Adjust the master screen control until the raster darkens to the point where raster is barely seen.
7. Adjust the service adjustment "S05" red, "S06" green, "S07" blue to obtain a good grey scale with normal white at low brightness level.
8. Select the service adjustment "S03" and reset data to "00". Select the service adjustment "S12" and reset data to obtain normal color level.
9. Remove probe and reset the master screen control to obtain normal brightness range.

White Balance Adjustment.

1. Receive a good local channel.
2. Select the service adjustment "S12" and set the data value to "00" to set the color level to the minimum. You may skip this step, if you selected a B/W picture or monoscope.
3. Alternately adjust the service adjustment data of "S08" and "S09" until a good grey scale with normal white is obtained.
4. Select the service adjustment "S12" and reset data to obtain normal color level.

Sub-Picture Adjustment

1. Receive a good local channel.
2. Make sure the customer picture control is set to maximum.
3. Enter the service mode and select the service adjustment "S10".
4. Adjust the data value to achieve normal contrast range.

Sub-Tint Adjustment

1. Receive a good local channel.
2. Set the customer tint control to the center of its range.
3. Enter the service mode and select the service adjustment "S11".
4. Adjust "S11" data value to obtain normal fresh tones.

Sub-Color Adjustment

1. Receive a good local channel.
2. Make sure the customer color control is set to center position.
3. Enter the service mode and select the service adjustment "S12".
4. Adjust "S12" data value to obtain normal color level.

Sub-Brightness Adjustment

1. Receive a good local channel.
2. Make sure the customer brightness control is set to center position.
3. Enter the service mode and select the service adjustment "S13".
4. Adjust "S13" data value to obtain normal brightness level.

Vertical-Size, V-Linearity, V-S Correction Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D02" for Vertical Size, "D05" for V-Linearity and "D06" for V-S Correction Adjustment.
3. Set in order "D05" for V-Linearity, "D06" for V-S Correction and set the data to get the best linearity.
4. Then adjust "D02" data until it become a proper vertical size.

Horizontal Position Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D01".
3. Adjust "D01" data value to center the picture.

Vertical-Phase Adjustment

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D03".
3. Adjust "D03" bus data to get the most acceptable vertical position.

Note: The step range is 20 ±10.

Caption Position Adjustment (Horizontal)

1. Receive a good local channel.
2. Enter the service mode DEF category and select the adjustment "D04".
3. A black text box will appear on the screen. (see **Figure C.** below)
4. Adjust "D04" data value to balance the text box position in the center. (A=B).



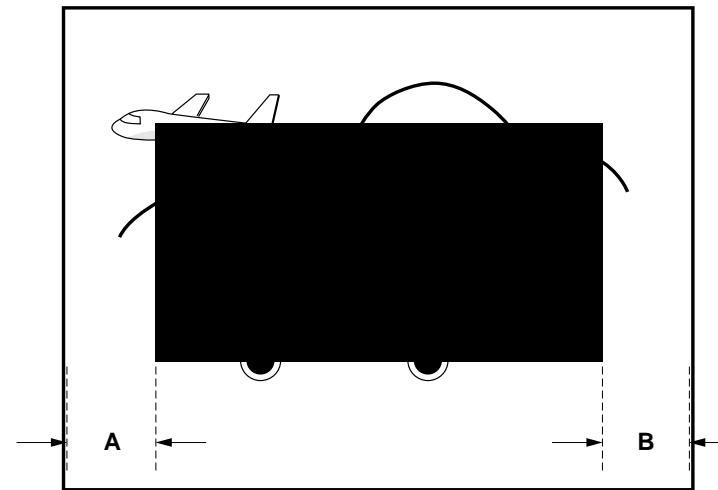


Figure C.

CHASSIS LAYOUT

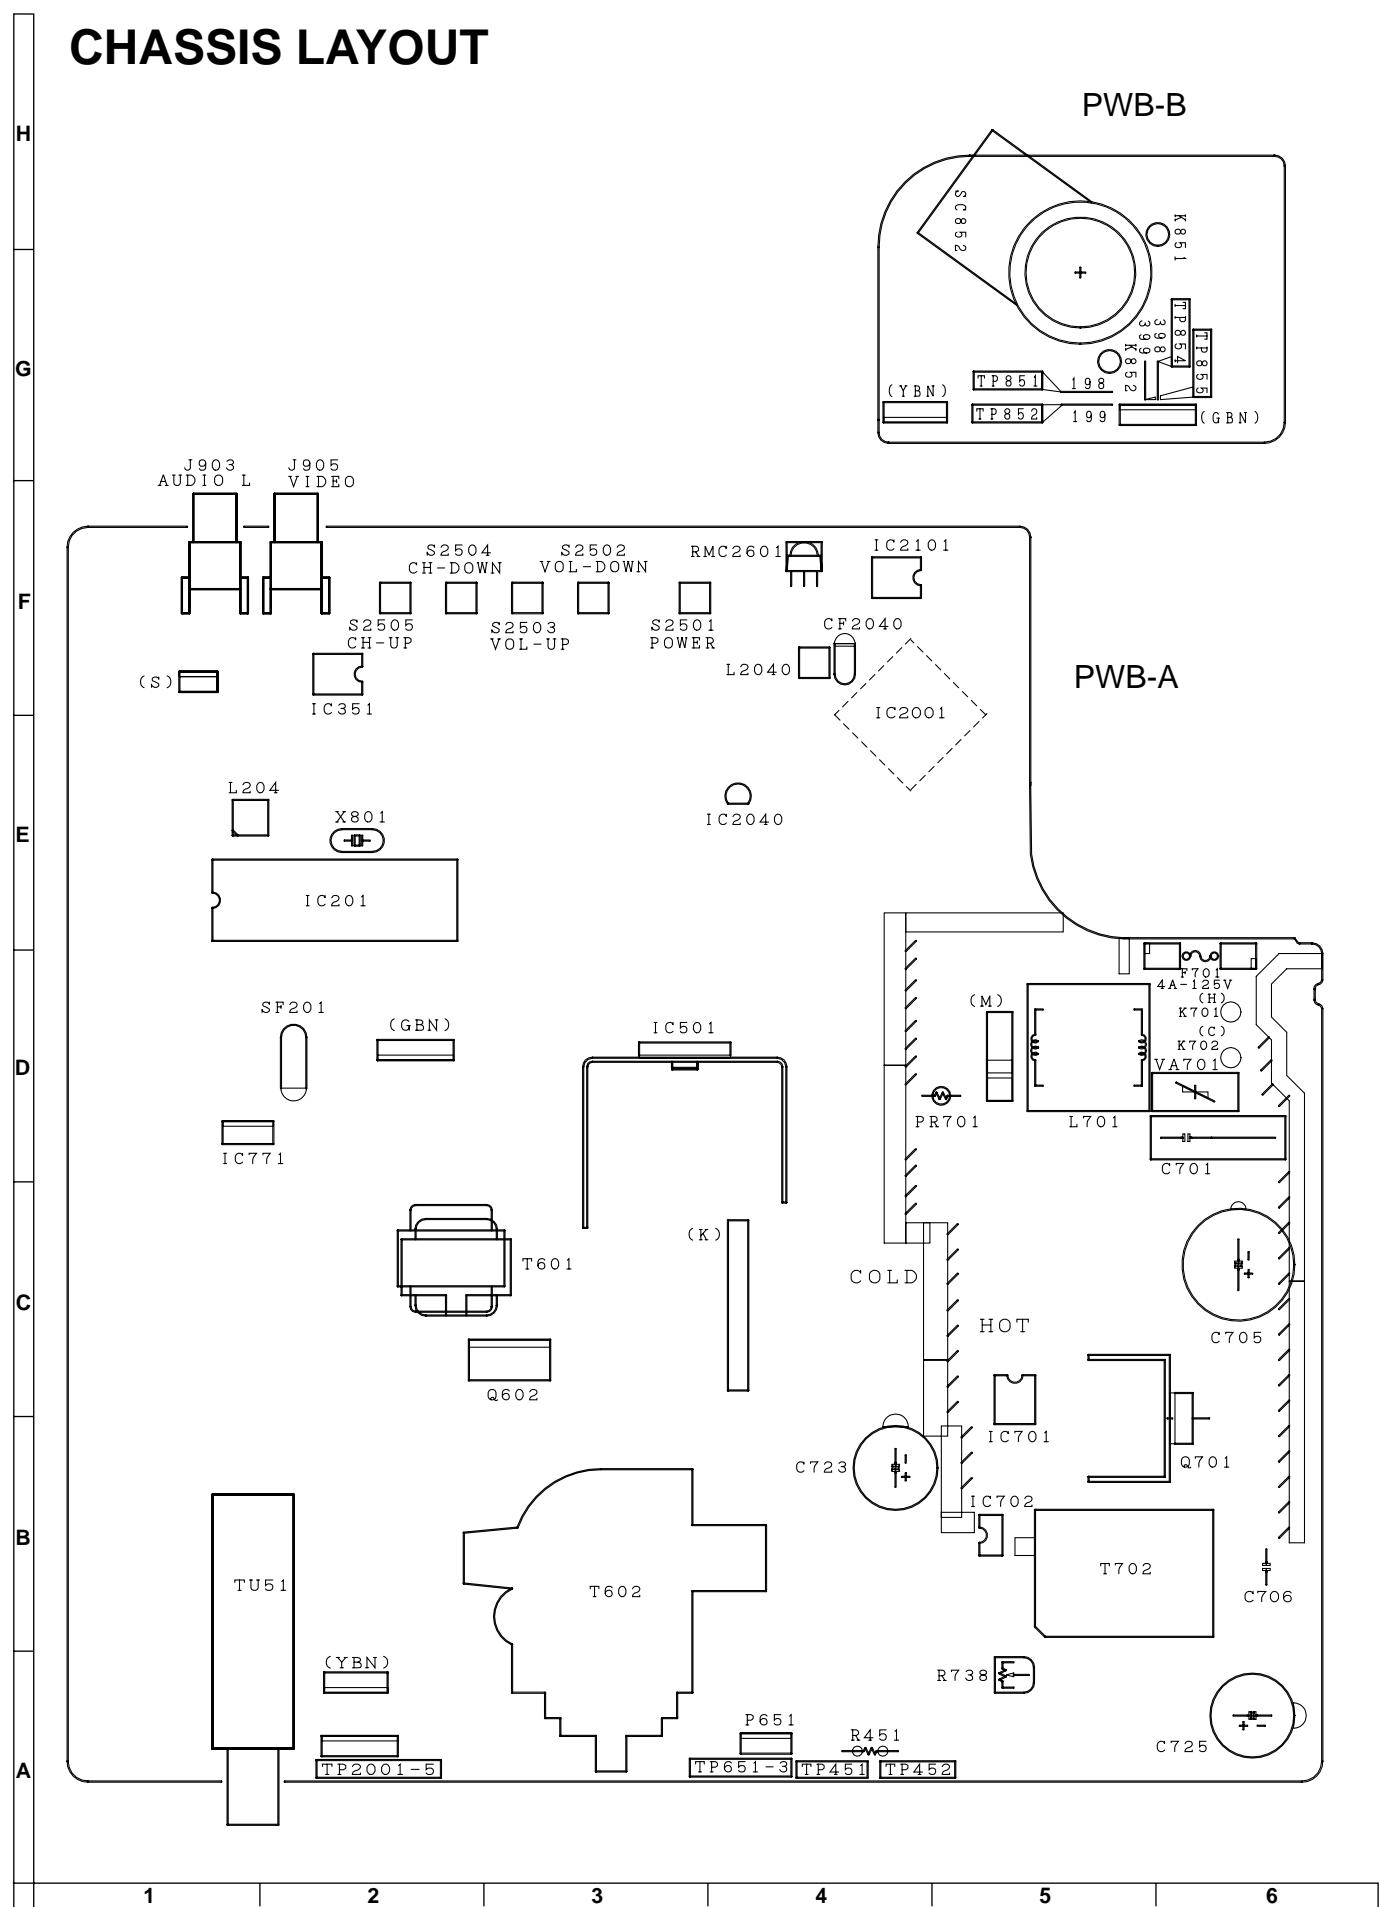

BLOCK DIAGRAM

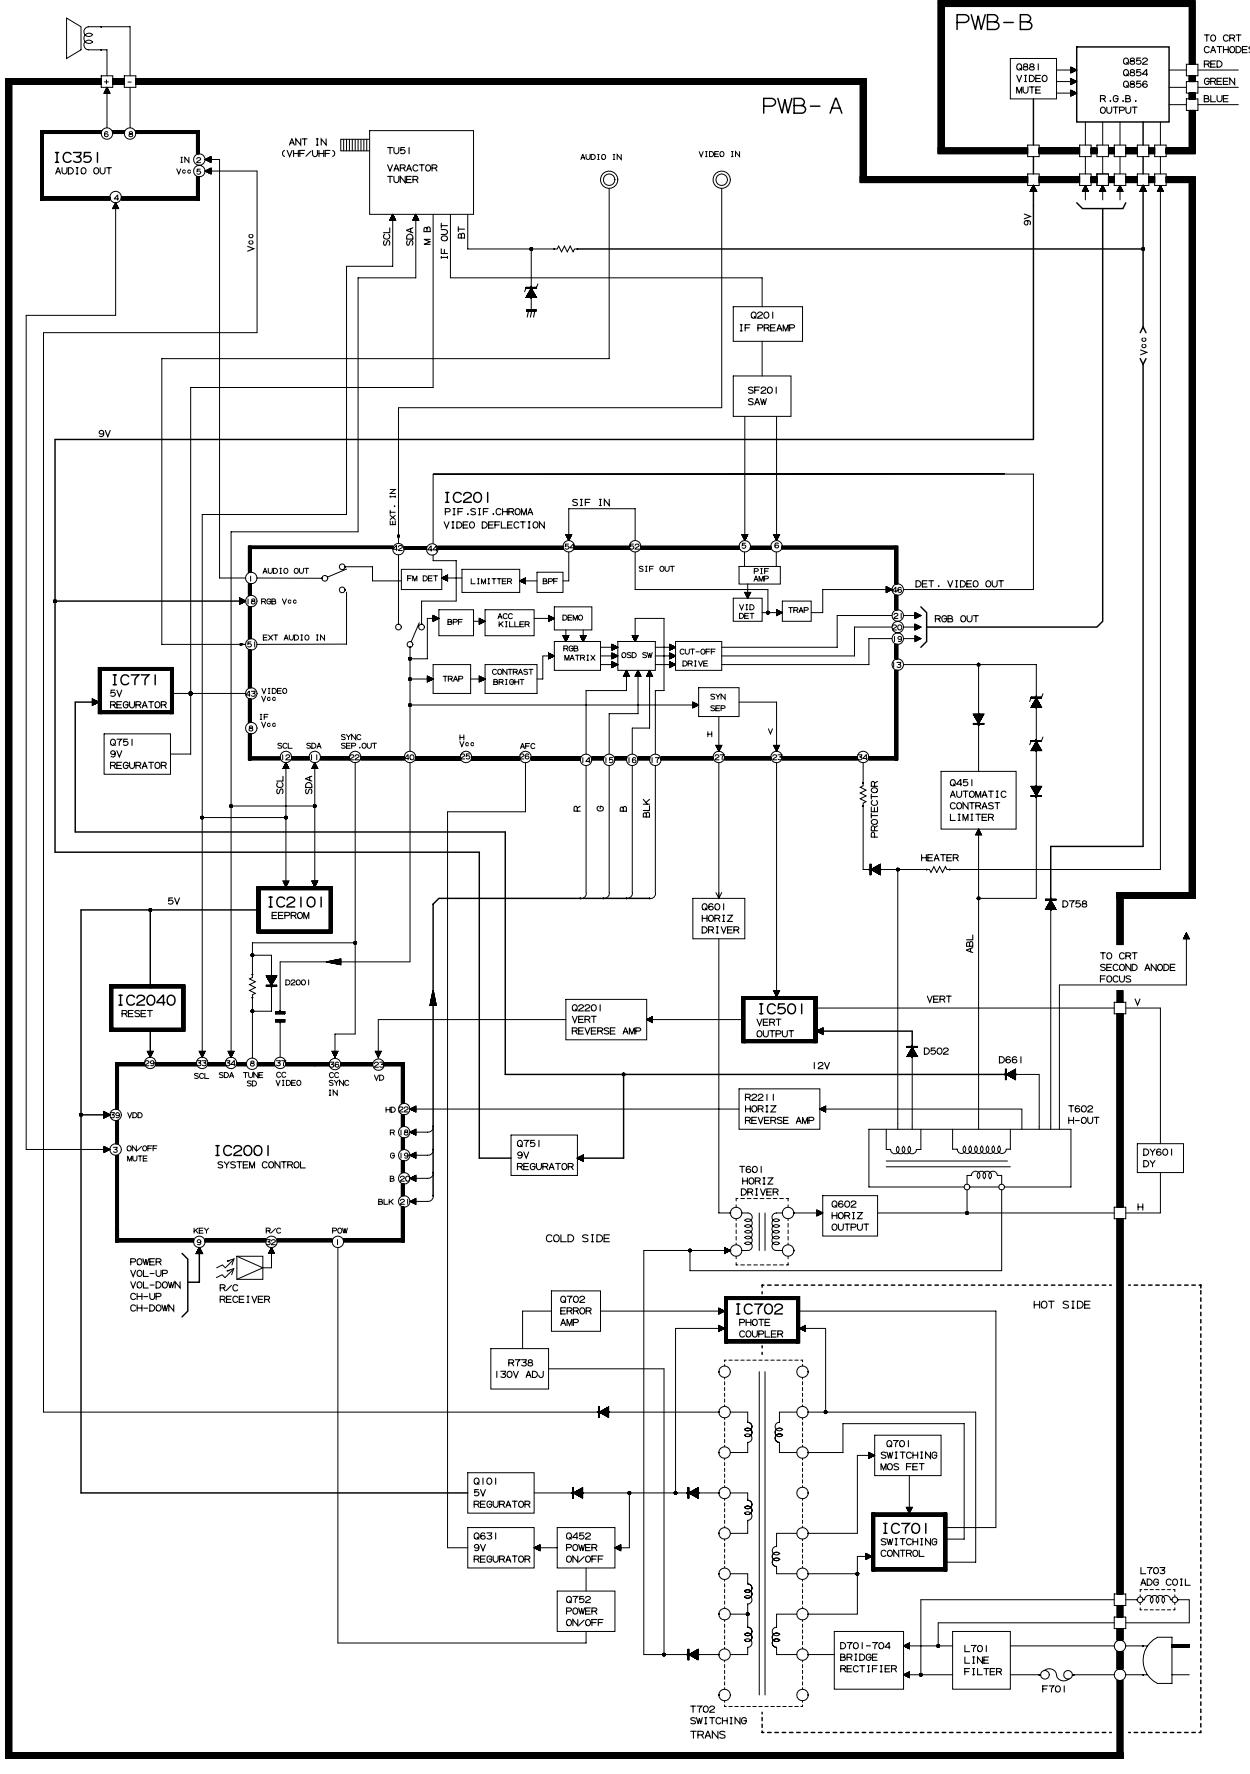

DESCRIPTION OF SCHEMATIC DIAGRAM

NOTES:

1. The unit of resistance "ohm" is omitted.
($K=k\Omega=1000\Omega$, $M=M\Omega$)
2. All resistors are 1/10 watt, unless otherwise noted.
3. All capacitors are μF , unless otherwise noted.
($P=pF=\mu\mu F$)
4. (G) indicates $\pm 2\%$ tolerance may be used.
5. $\not\parallel$ indicates line isolated ground.

VOLTAGE MEASUREMENT CONDITIONS:

1. All DC voltages are measured with DVM connected between points indicated and chassis ground, line voltage set at 120V AC and all controls set for normal picture unless otherwise indicated.
2. All voltages measured with $1000\mu V$ B & W or Color signal.

WAVEFORM MEASUREMENT CONDITIONS:

1. Photographs taken on a standard gated color bar signal, the tint setting adjusted for proper color. The wave shapes at the red, green and blue cathodes of the picture tube depend on the tint, color level and picture control.
2.  indicates waveform check points (See chart, waveforms are measured from point indicated to chassis ground.)


 AND SHADED () COMPONENTS = SAFETY RELATED PARTS.

 MARK= X-RAY RELATED PARTS.


DORGANNES MARQUES  ET HACHRES ():
PIECES RELATIVES A LA SECURITE.
MARQUE  : PIECES RELATIVE AUX RAYONS X.

This circuit diagram is a standard one, printed circuits may be subject to change for product improvement without prior notice.


WAVEFORMS

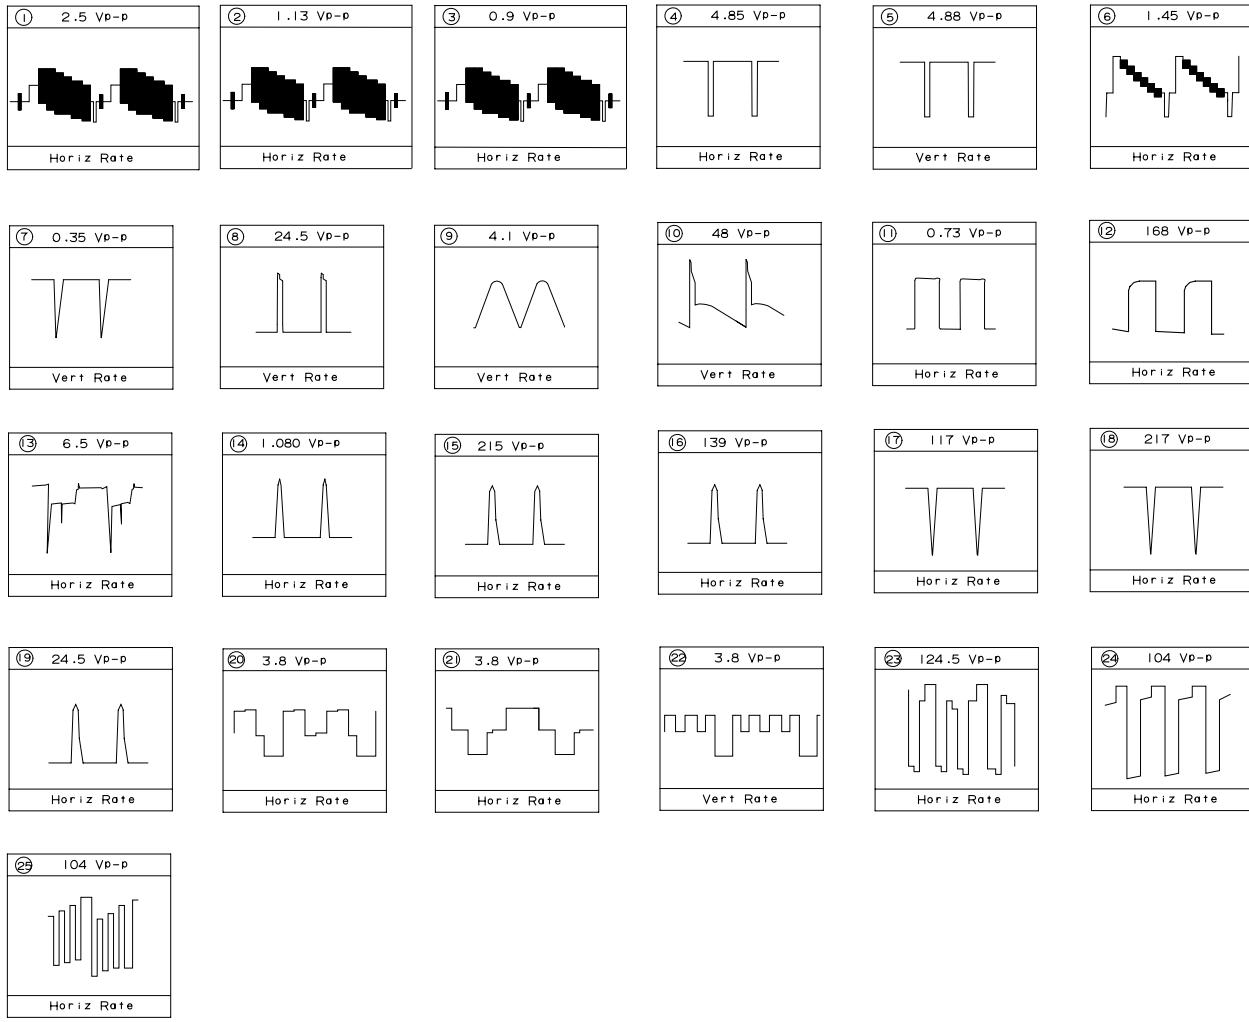

MODELS 13N-M100B/150B SCHEMATIC DIAGRAM: MAIN Unit

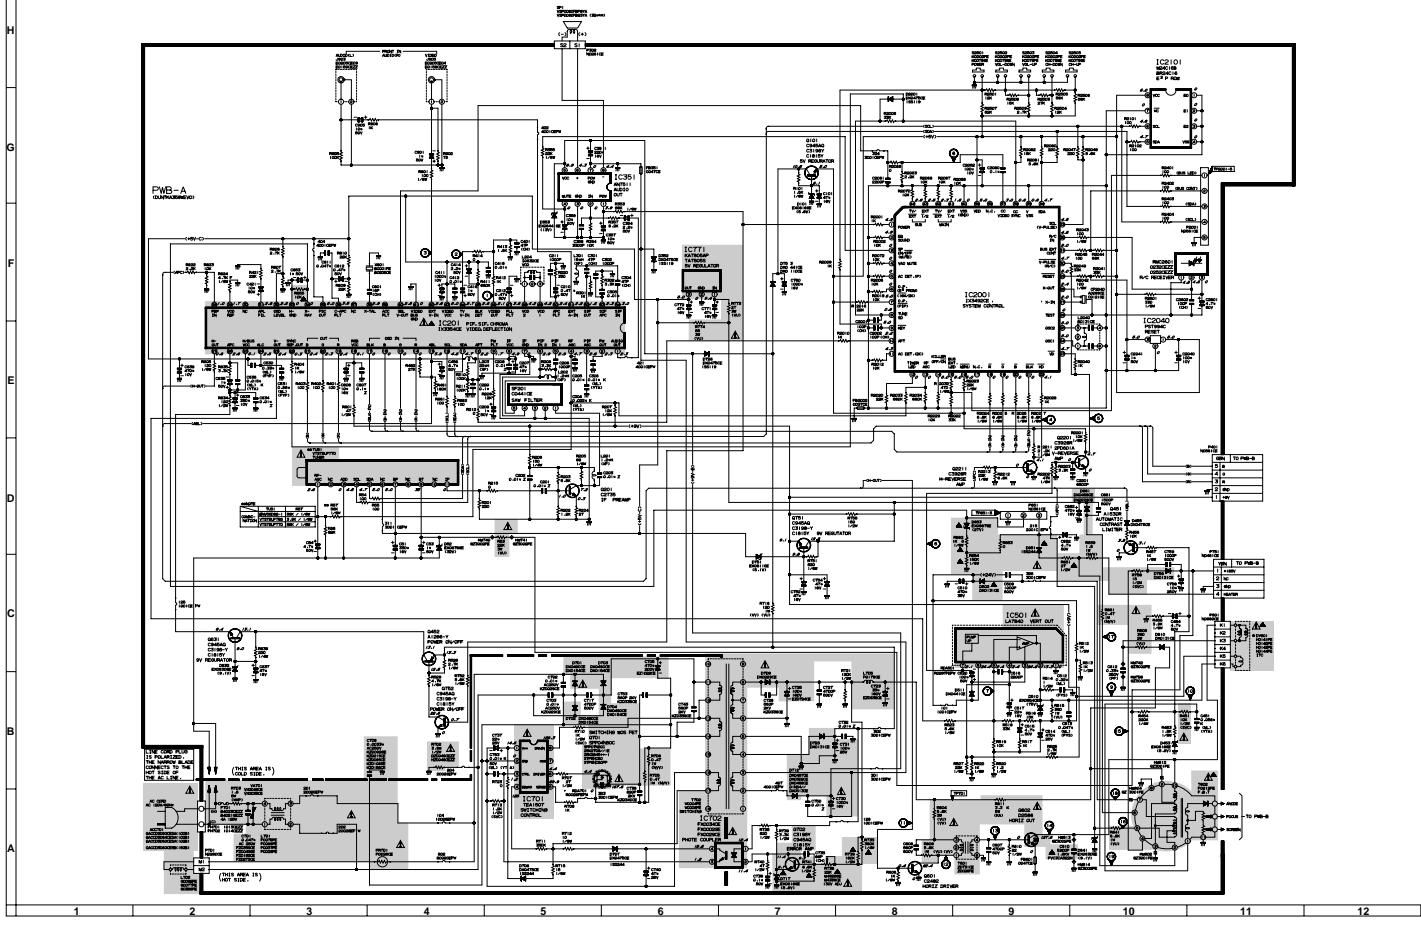


MODEL CN13M10B SCHEMATIC DIAGRAM: MAIN Unit

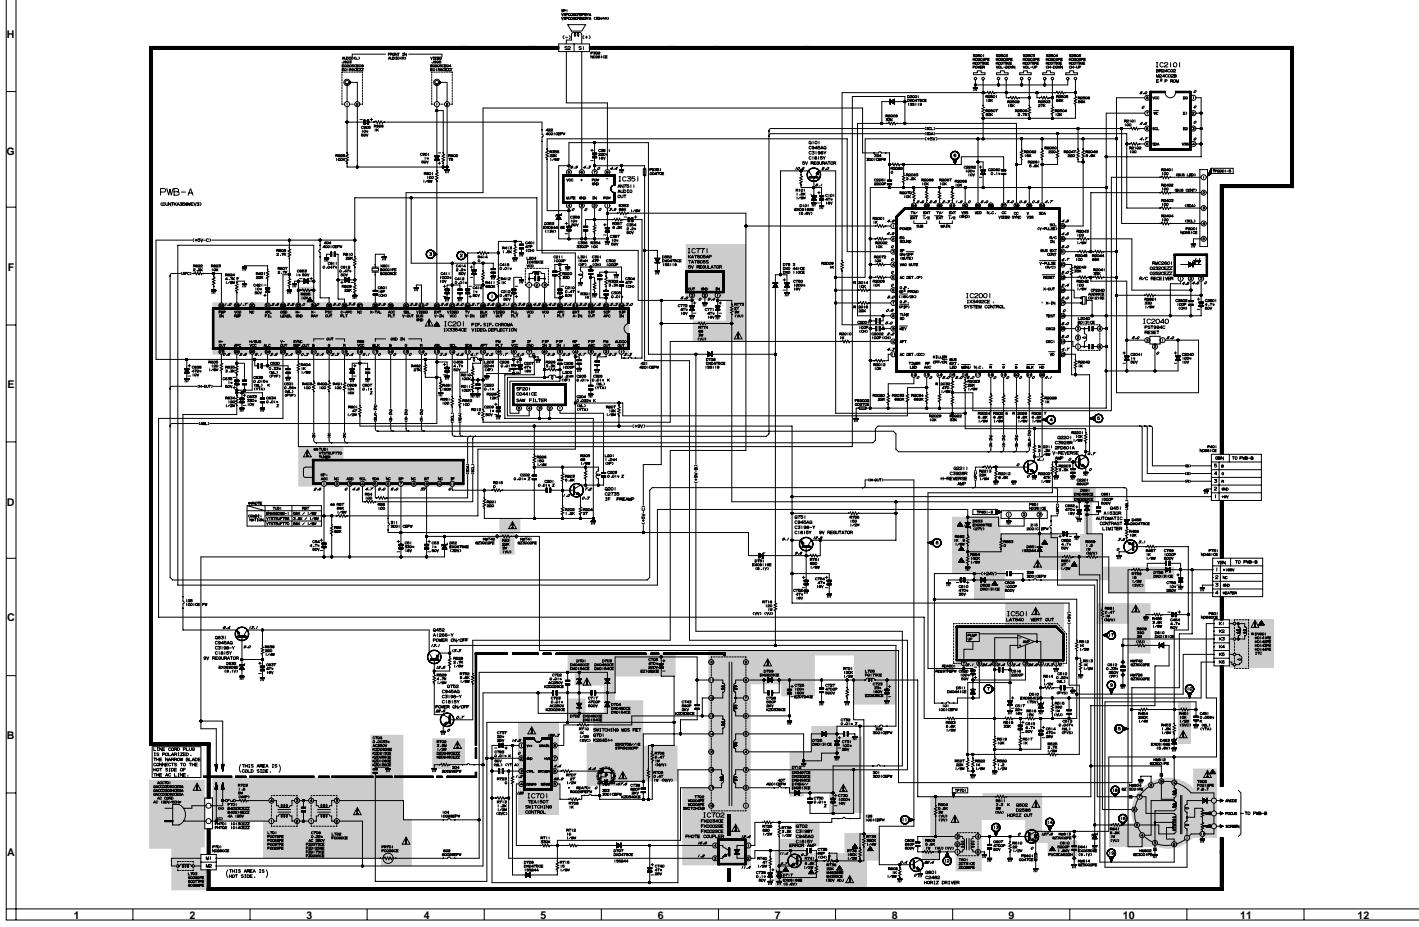

SCHEMATIC DIAGRAM: CRT Unit


REPLACE WITH A PICTURE
TUBE OF THE SAME TYPE
NUMBER FOR CONTINUED
SAFETY.

22.5KV (AT 820 μA)

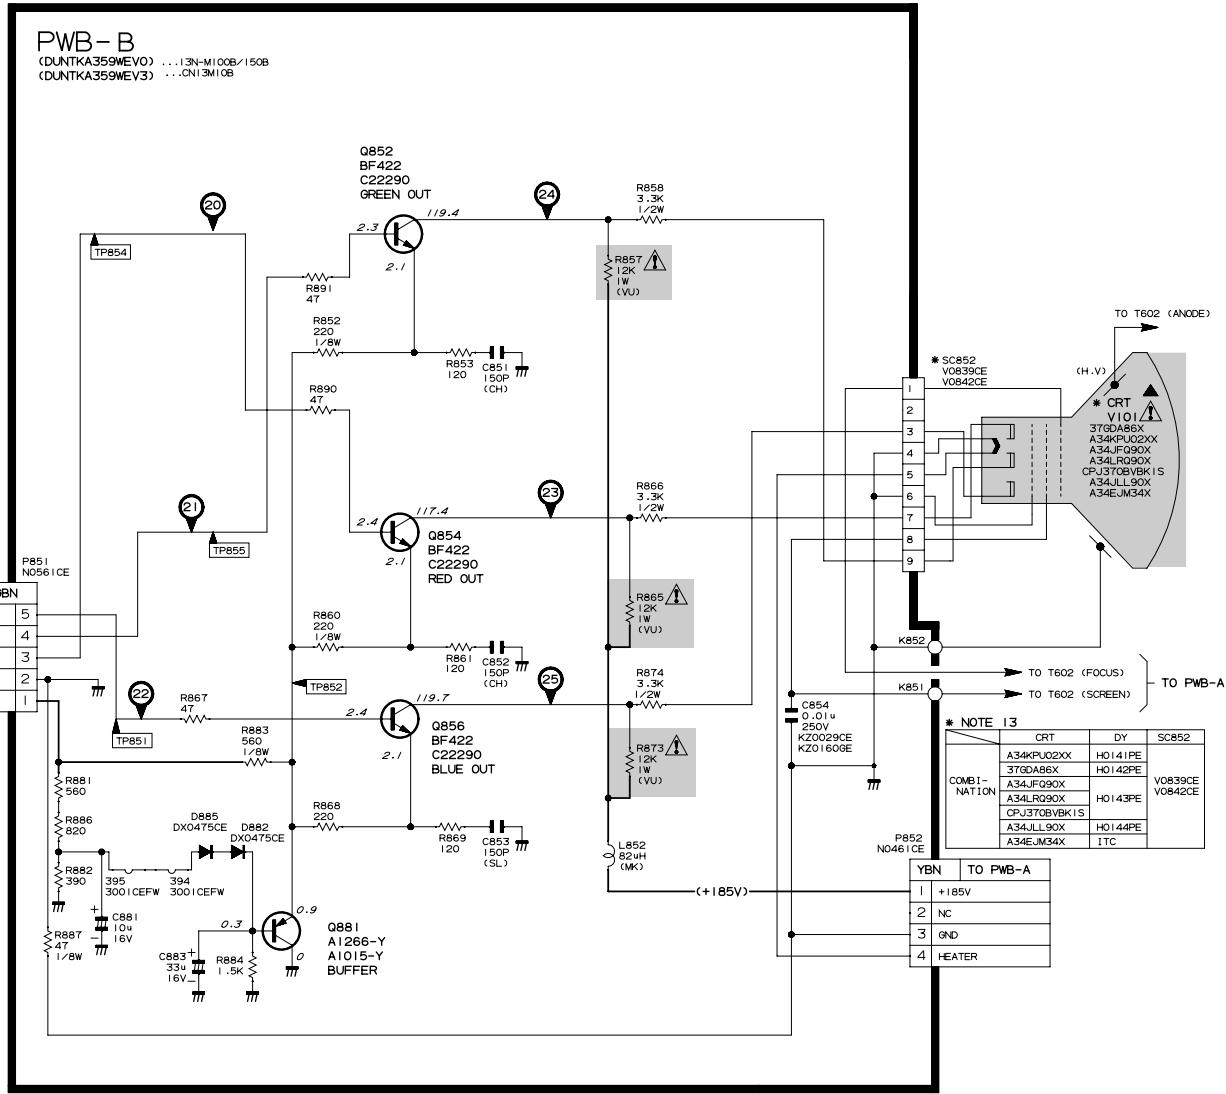


PRINTED WIRING BOARD ASSEMBLIES

H
G
F
E
D
C
B
A

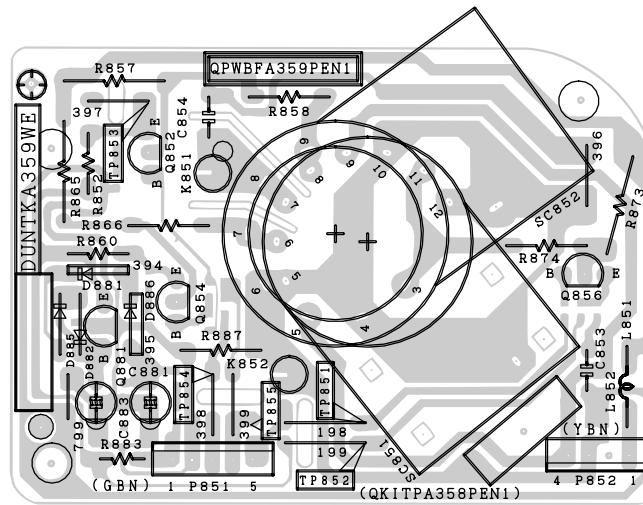

PWB-B: CRT Unit (Wiring Side)

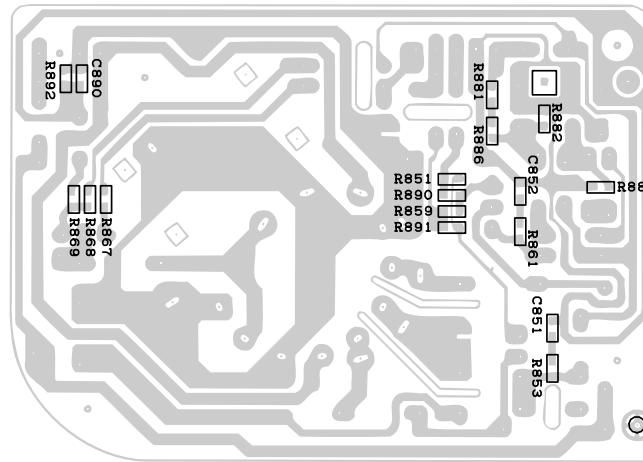

PWB-B: CRT Unit (Chip Parts Side)

1 2 3 4 5 6

H

G

F


E

D


C

B

A

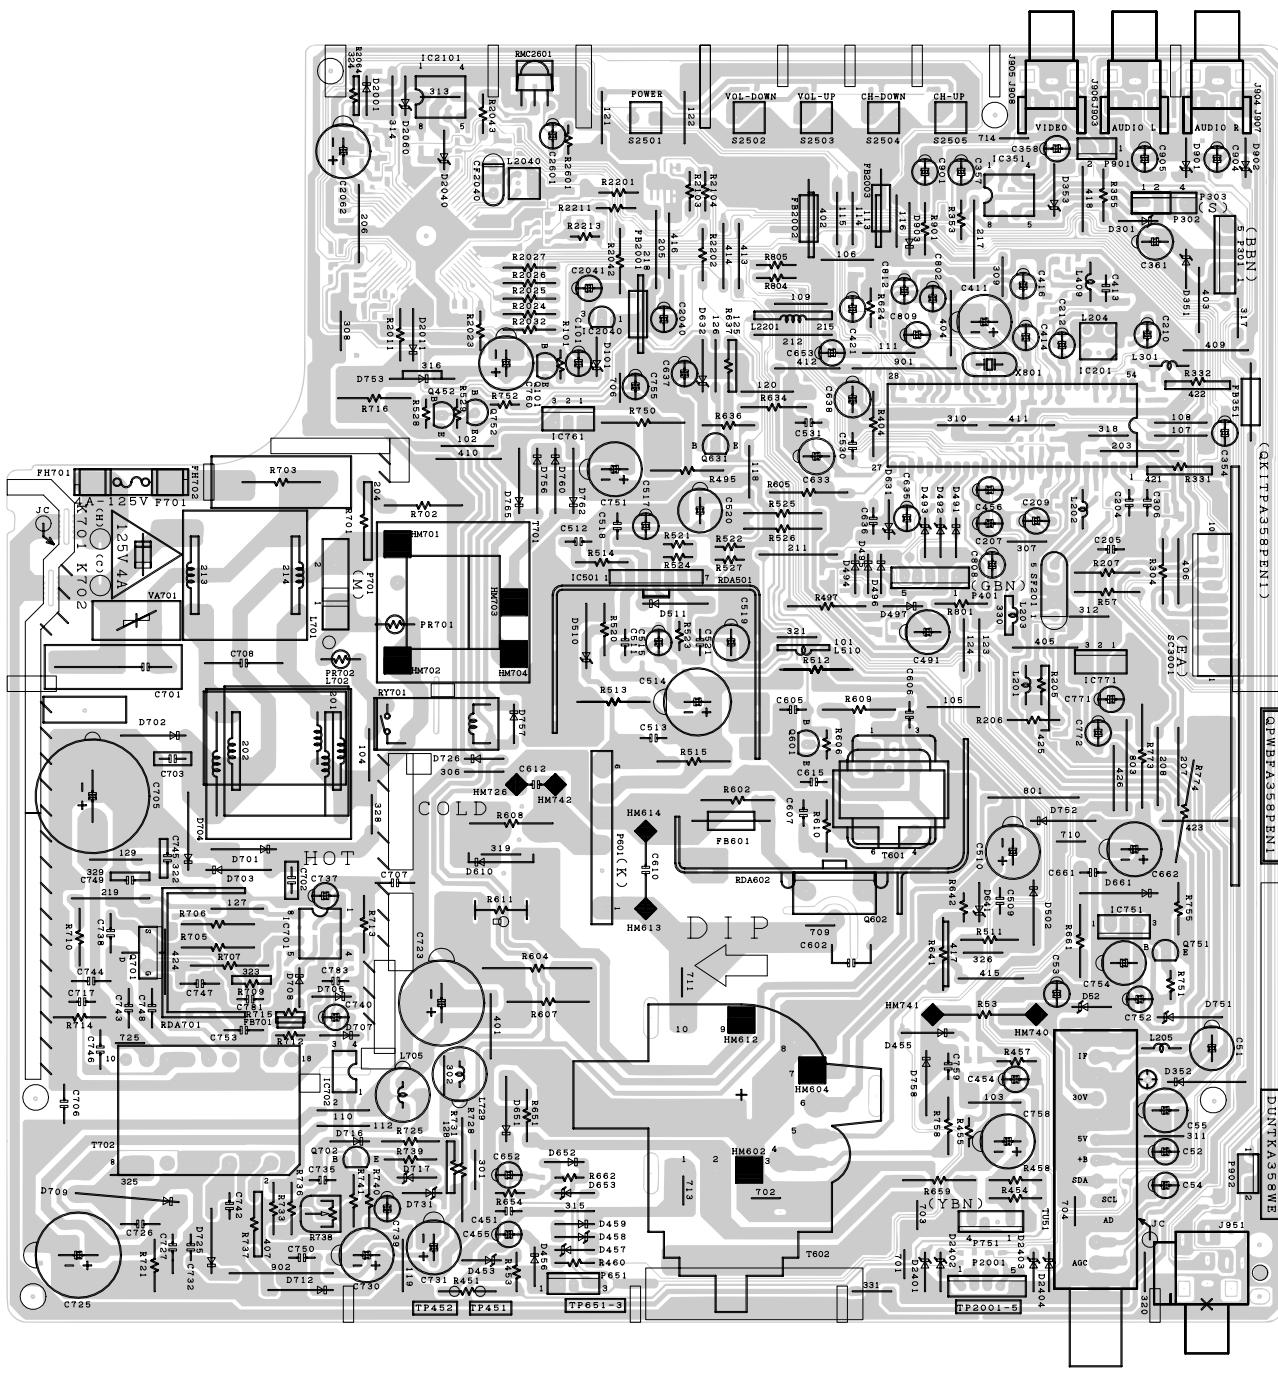

PWB-A: MAIN Unit (Wiring Side)

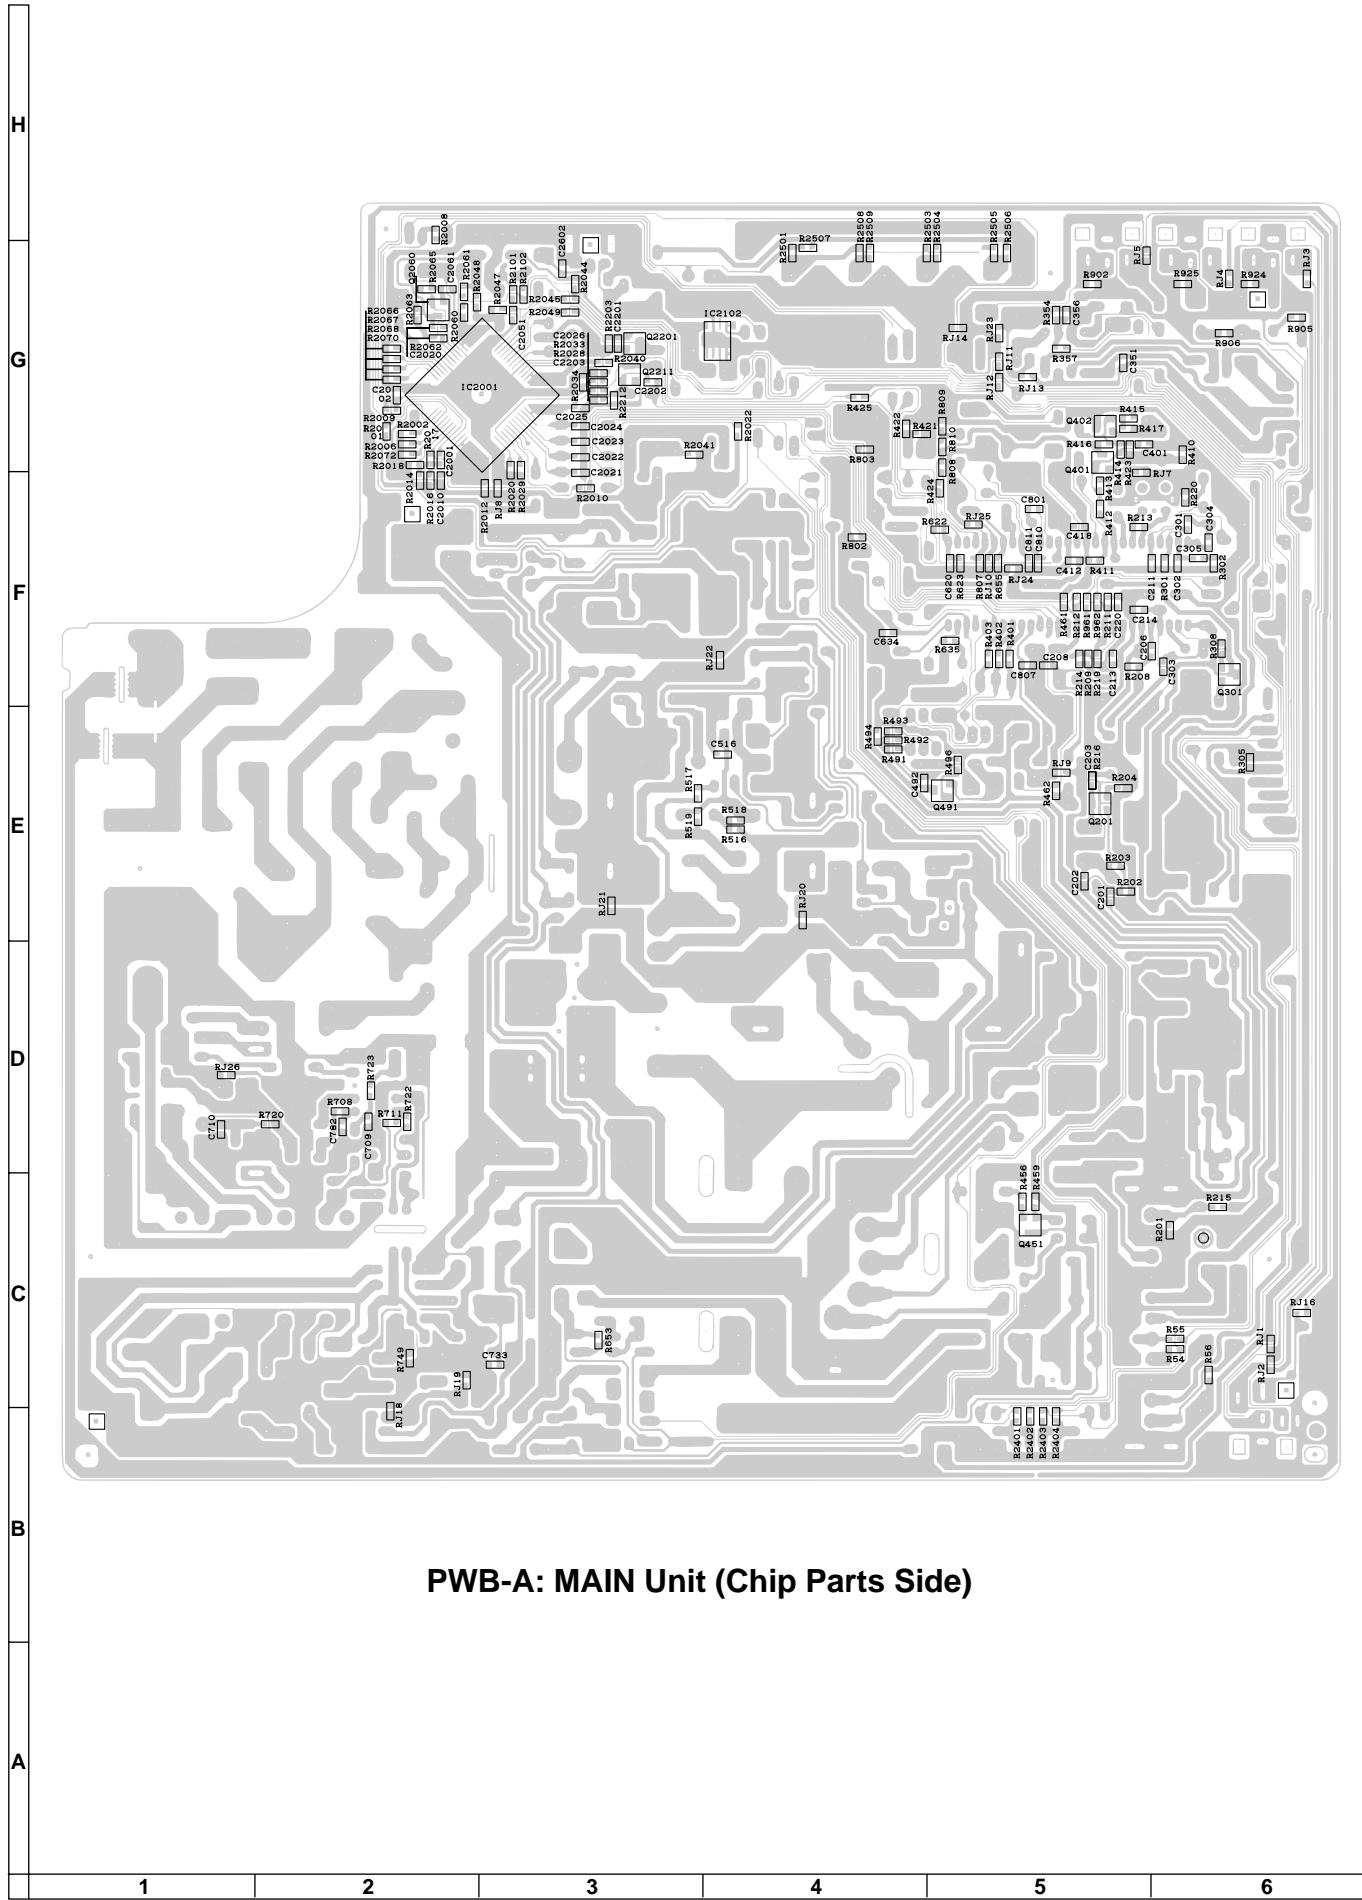

PWB-A: MAIN Unit (Chip Parts Side)

PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics identified in this manual; electrical components having such features are identified by \triangle and shaded areas in the Replacement Parts Lists and Schematic Diagrams. The use of a substitute replacement part which does not have the same safety characteristic as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following information.

- | | |
|-----------------|----------------|
| 1. MODEL NUMBER | 2. REF. NO. |
| 3. PART NO. | 4. DESCRIPTION |

in USA: Contact your nearest SHARP Parts Distributor to order. For location of SHARP Parts Distributor, Please call Toll-Free: 1-800-BE-SHARP


★ MARK: SPARE PARTS-DELIVERY SECTION

▲ MARK: X-RAY RELATED PARTS

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PICTURE TUBE

\triangle V101	VB37GDA86X/1E	R	CRT (DY601: H0142PE)	CB
	or			
	VB34KPU02X/*S		CRT (DY601: H0141PE)	
	or			
	VB34JFQ90X/*S		CRT (DY601: H0143PE)	
	or			
	VB34LRQ90X/*S		CRT (DY601: H0143PE)	
	or			
	VB370BVBK1S-S		CRT (DY601: H0143PE)	
	or			
	VB34JLL90X/*S		CRT (DY601: H0144PE)	
	or			
	VB34EJM34X/1E		CRT (I.T.C.)	
\triangle DY601	RCiLH0142PEZZ	R	DY (CRT: 37GDA86X)	AZ
	or			
	RCiLH0141PEZZ		DY (CRT: A34KPU02XX)	
	or			
	RCiLH0143PEZZ		DY (CRT: CPJ370BVBK1S)	
	or			
	A34JFQ90X		or A34JFQ90X	
	or			
	A34LRQ90X		or A34LRQ90X	
	or			
	RCiLH0144PEZZ		DY (CRT: A34JLL90X)	

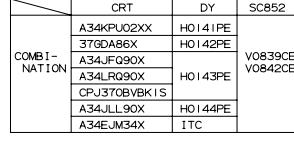

\triangle L703	RCiLG0092PEZZ	R	Degaussing Coil	AK
	or			
	RCiLG0077PEZZ			
	or			
	RCiLG0386PEZZ			
	PMAGF3045CEZZ	R	Purity Magnet	AG
	QEARC1436PEZZ	R	Grounding Strap	AE

LISTE DES PIÈCES

CHANGE DES PIÈCES

Les pièces de rechange qui présentent ces caractéristiques spéciales de sécurité identifiées dans ce manuel; les composants électriques ayant de telles caractéristiques sont identifiés par la marque \triangle et sont hachurées dans les listes de pièces et dans les schémas électroniques.

La substitution d'une pièce de rechange par une autre qui ne présente pas les mêmes caractéristiques de sécurité que la pièce recommandée par l'usine et dans ce manuel de service, peut provoquer une électrocution, un incendie ou tout autre sinistre.

"COMMENT COMMANDER LES PIÈCES DE RECHANGE"

Pour que votre commande soit rapidement et correctement remplie, veuillez fournir les renseignements suivants.

- | | |
|---------------------|----------------|
| 1. NUMERO DU MODELE | 2. NO. DE REF |
| 3. NO. DE PIÈCE | 4. DESCRIPTION |

in CANADA: Contact SHARP Electronics of Canada Limited
Phone (416) 890-2100

★ MARQUE: SECTION LIVRAISON DES PIÈCES DE RECHANGE

▲ MARQUE: PIÈCES RELATIVE AUX RAYONS X

Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PRINTED WIRING BOARD ASSEMBLIES (NOT REPLACEMENT ITEM)

PWB-A DUNTKA358WEV0 — MAIN Unit (13N-M100B/150B) —
PWB-A DUNTKA358WEV3 — MAIN Unit (CN13M10B) —
PWB-B DUNTKA359WEV0 — CRT Unit (13N-M100B/150B) —
PWB-B DUNTKA359WEV3 — CRT Unit (CN13M10B) —

**PWB-A: DUNTKA358WEV0 (13N-M100B/150B)
PWB-A: DUNTKA358WEV3 (CN13M10B)
MAIN UNIT**

TUNER

NOTE: THE PARTS HERE SHOWN ARE SUPPLIED AS AN ASSEMBLY BUT NOT INDEPENDENTLY.

\triangle TU51	VTUVTST5UF770	J Tuner	AZ
	or		
	VTUVTST5UF78S		
	or		
	VTUENV56D82-1		

	TU51	R57
COMBI-NATION	ENV56D82-1	56K / 1/8W
	VTST5UF78S	3.9K / 1/8W
	VTST5UF770	56K / 1/8W

INTEGRATED CIRCUITS

\triangle IC201	RH-iX3354CEZZ	J LX3354CE	AT
IC351	VHiAN7511/-1	J AN7511	AK
\triangle IC501	VHILAT7840/-1	J LA7840	AR
\triangle IC701	VHiTEA1507/-1	J TEA1507P/N1	AL
\triangle IC702	RH-FX0034CEZZ	J PC817	AE
	or		
	RH-FX0002GEZZ		
	or		
	RH-FX0029CEZZ		

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code	
PWB-A: DUNTKA358WEV0 (13N-M100B/150B)										
PWB-A: DUNTKA358WEV3 (CN13M10B)										
MAIN UNIT (Continued)										
△ IC771	VHiKA7805AP-1	J	KIA7805API or VHiTA7805S/-1	AE	D453	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA	
IC2001	RH-IX3492CEZZQ	J	IX3492CE	AU	D455	RH-DX0475CEZZ	J	Diode	AB	
IC2040	VHiPST994C/-1	J	PST994C	AD	▲△ D502	RH-DX0131CEZZ	J	Diode	AC	
IC2101	VHiBR24C02/-1	J	I.C. (CN13M10B) or VHiM24C02B/-1	AL	D510	RH-EX0654CEZZ	J	Zener Diode, 75V	AD	
IC2101	VHiM24C16B/-1	J	M24C16-BN6 (13N-M100B/150B)	AG	D511	RH-DX0441CEZZ	J	Diode	AC	
TRANSISTORS										
Q101	VS2SC945AQ/-1	J	2SC945AQ or VS2SC3198-Y-1 or VS2SC1815Y/-1	AB	D610	RH-DX0131CEZZ	J	Diode	AC	
Q201	VS2SC2735//1E	J	2SC2735	AC	D632	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA	
Q451	VS2SA1530R/-1	J	2SA1530R	AB	▲△ D641	RH-EX0630GEZZ	J	Zener Diode, 9.1V	AA	
Q452	VS2SA1266-Y-1	J	2SA1266(Y)	AA	▲△ D651	VHD1SS244/-1	J	Diode	AB	
Q601	VS2SC2482/-1	J	2SC2482	AD	▲△ D653	RH-EX0667GEZZ	J	Zener Diode, 27V	AA	
△ Q602	VS2SD2586//1E	J	2SD2586	AM	△ D661	RH-DX0468CEZZ	J	Diode	AE	
Q631	VS2SC945AQ/-1	J	2SC945AQ or VS2SC3198-Y-1 or VS2SC1815Y/-1	AB	D701	RH-DX0229CEZZ or RH-DX0154CEZZ	J	Diode	AC	
△ Q701	VS2SK2645++-1	J	K2645++ (CN13M10B)	AN	△ D702	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC	
VS2SK2708//1E	or	VS2SK2708//1E	or	△ D703	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC		
VSSTP6NC60F-1	or	VSSTP6NC60F-1	or	△ D704	RH-DX0490CEZZ or RH-DX0154CEZZ	J	Diode	AC		
△ Q701	VSSPP04N60C-1	J	SPP04N60 (13N-M100B/150B)	AH	D707	RH-DX0475CEZZ or VHD1SS244/-1	J	Diode	AB	
VS2SK2708//1E	or	VS2SK2708//1E	or	D708	RH-DX0475CEZZ or VHD1SS244/-1	J	Diode	AB		
VS2SK2645++-1	or	VS2SK2645++-1	or	△ D709	RH-DX0229CEZZ	J	Diode	AF		
VSSTP6NC60+-1	or	VSSTP6NC60+-1	or	△ D712	RH-DX0487CEZZ or RH-DX0302CEZZ	J	Diode	AC		
VSSTP6NC60F-1	or	VSSTP6NC60F-1	or	D709	RH-DX0468CEZZ or RH-DX0468CEZZ	J	Diode	AC		
△ Q701	VSSPP07N60C-1	J	SPP04N60 (13N-M100B/150B)	AH	D712	RH-DX0468CEZZ or RH-DX0302CEZZ	J	Diode	AC	
VS2SK2708//1E	or	VS2SK2708//1E	or	△ D717	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA		
VS2SK2645++-1	or	VS2SK2645++-1	or	△ D725	RH-DX0131CEZZ	J	Diode	AC		
VSSTP6NC60+-1	or	VSSTP6NC60+-1	or	D726	RH-DX0475CEZZ or VHD1SS119/-1	J	Diode	AB		
VSSTP6NC60F-1	or	VSSTP6NC60F-1	or	D751	RH-EX0611GEZZ	J	Zener Diode, 5.1V	AA		
△ Q702	VS2SC945AQ/-1	J	2SC945AQ	AB	D753	RH-DX0441CEZZ or RH-DX0110CEZZ	J	Diode	AC	
VS2SC3198-Y-1	or	VS2SC3198-Y-1	or	△ D758	RH-DX0131CEZZ	J	Diode	AC		
VS2SC1815Y/-1	or	VS2SC1815Y/-1	or	D2001	RH-DX0475CEZZ or VHD1SS119/-1	J	Diode	AB		
VS2SC945AQ/-1	or	VS2SC945AQ/-1	or	△ VA701	RH-VX0048CEZZ or RH-VX0035CEZZ	J	Varistor (13N-M100B/150B)	AE		
VS2SC3198-Y-1	or	VS2SC3198-Y-1	or	PACKAGED CIRCUITS					AF	
VS2SC1815Y/-1	or	VS2SC1815Y/-1	or	△ PR701	RMPTP0026CEZZ	J	Packaged Circuit	AF		
VS2SC945AQ/-1	or	VS2SC945AQ/-1	or	X801	RCRSB001PEZZ	R	Crystal	AL		
VS2SC3198-Y-1	or	VS2SC3198-Y-1	or	or RCRSB0205CEZZ						
VS2SC1815Y/-1	or	VS2SC1815Y/-1	or	FILTERS						
Q2201	VS2SC3928R/-1	J	2SC3928R	AB	CF2040	RFiLA0099CEZZ	J	Ceramic Filter	AE	
VS2PD601AR/-1	or	VS2PD601AR/-1	or	SF201	RFiLC0121GEZZ	J	SAW Filter	AH		
Q2211	VS2SC3928R/-1	J	2SC3928R	AB	L201	VP-XF1R2K0000	J	Peaking 1.2μH	AB	
DIODES										
D52	RH-EX0676GEZZ	J	Zener Diode, 32V	AA	L202	VP-XF1R2K0000	J	Peaking 1.2μH	AB	
D101	RH-EX0616GEZZ	J	Zener Diode, 5.6V	AA	L203	VP-XF220K0000	J	Peaking 22μH	AB	
D352	RH-DX0475CEZZ	J	Diode or VHD1SS119/-1	AB	L204	RCiLi0632CEZZ	J	IF Coil	AE	
D353	RH-EX0644GEZZ	J	Zener Diode, 13V	AB	COILS					

Ref. No.	Part No.	★	Description	Code	Ref. No.	Part No.	★	Description	Code
PWB-B: DUNTKA359WEV0 (13N-M100B/150B)									
PWB-B: DUNTKA359WEV3 (CN13M10B)									
CRT UNIT									
	TRANSISTORS								
Q852	VSBF422///-1 or VS2SC2229O/1E	J	BF422	AC	△ ACC701 SP1	QACCD3090CESA or QACCD3064CESA	J	AC Cord (13N-M100B, CN13M10B)	AK
Q854	VSBF422///-1 or VS2SC2229O/1E	J	BF422	AC	△ ACC701	QACCD3060CESA or VSP0080PBP8YA	J	AC Cord (13N-M150B)	AR
Q856	VSBF422///-1 or VS2SC2229O/1E	J	BF422	AC	SP1	QACCD3060CESB or QCNW-2105PEZZ	R	Speaker, 32ohm	AK
Q881	VS2SA1266-Y-1 or VS2SA1015-Y-1	J	A1266(Y)	AA		QCNW-2106PEZZ	R	Connecting Cord	AF
	DIODES								
D882	RH-DX0475CEZZ	J	Diode	AB		QCNW-2107PEZZ	R	Connecting Cord	AE
D885	RH-DX0475CEZZ	J	Diode	AB			R	Connecting Cord	AE
	COIL								
L852	VP-MK820K0000	J	Peaking 82μH	AB					
	CAPACITORS [EL... Electrolytic]								
C851	VCCCCY1HH151J	J	150p 50V	Ceramic	AA				
C852	VCCCCY1HH151J	J	150p 50V	Ceramic	AA				
C853	VCCSPA1HL151J	J	150p 50V	Ceramic	AA				
C854	RC-KZ0029CEZZ or RC-KZ0160GEZZ	J	0.01 250V	Ceramic	AC				
C881	VCEA0A1CW106M	J	10 16V	EL.	AB				
C883	VCEA0A1CW336M	J	33 16V	EL.	AB				
	RESISTORS [M-Ox... Metal Oxide, M-Film... Metal Film]								
R852	VRD-RA2BE221J	J	220 1/8W	Carbon	AA				
R853	VRN-MD2AL121J	J	120 1/10W	M-Film	AA				
△ R857	VRS-VU3AE123J	J	12k 1W	M-Ox.	AB				
R858	VRD-RM2HD332J	J	3.3k 1/2W	Carbon	AA				
R860	VRD-RA2BE221J	J	220 1/8W	Carbon	AA				
R861	VRN-MD2AL121J	J	120 1/10W	M-Film	AA				
△ R865	VRS-VU3AE123J	J	12k 1W	M-Ox.	AB				
R866	VRD-RM2HD332J	J	3.3k 1/2W	Carbon	AA				
R867	VRN-MD2AL470J	J	47 1/10W	M-Film	AA				
R868	VRN-MD2AL221J	J	220 1/10W	M-Film	AA				
R869	VRN-MD2AL121J	J	120 1/10W	M-Film	AA				
△ R873	VRS-VU3AE123J	J	12k 1W	M-Ox.	AB				
R874	VRD-RM2HD332J	J	3.3k 1/2W	Carbon	AA				
R881	VRN-MD2AL561J	J	560 1/10W	M-Film	AA				
R882	VRN-MD2AL391J	J	390 1/10W	M-Film	AA				
R883	VRD-RA2BE561J	J	560 1/8W	Carbon	AA				
R884	VRN-MD2AL152J	J	1.5k 1/10W	M-Film	AA				
R886	VRN-MD2AL821J	J	820 1/10W	M-Film	AA				
R887	VRD-RA2BE470J	J	47 1/8W	Carbon	AA				
R890	VRN-MD2AL470J	J	47 1/10W	M-Film	AA				
R891	VRN-MD2AL470J	J	47 1/10W	M-Film	AA				
	MISCELLANEOUS PARTS								
P851	QPLGN0561CEZZ	J	Plug, 5-pin (GBN)	AB					
P852	QPLGN0461CEZZ	J	Plug, 4-pin (YBN)	AB					
SC852	QSOCV0839CEZZ or QSOCV0842CEZZ	J	CRT Socket	AK					
MISCELLANEOUS PARTS									
	SUPPLIED ACCESSORIES								
	RRMCG1324CESA	J	Infrared R/C Unit (13N-M100B, CN13M10B)	AT					
	RRMCG1324CESB	J	Infrared R/C Unit (13N-M150B)	AT					
	TiNS-7209PEZZ	R	Operation Manual (13N-M100B/150B)	AE					
	TiNS-7238PEZZ	R	Operation Manual (CN13M10B)						


Ref. No.	Part No.	★	Description	Code
----------	----------	---	-------------	------

PACKING PARTS (NOT REPLACEMENT ITEM)


SPAKC6619PEZZ	—	Packing Case (13N-M100B)	—
SPAKC6620PEZZ	—	Packing Case (13N-M150B)	—
SPAKC6633PEZZ	—	Packing Case (CN13M10B)	—
SPAKP0031PEZZ	—	Wrapping Paper	—
SPAKP0110PEZZ	—	Wrapping Paper	—
SPAKX2630PEZZ	—	Buffer Material	—
SSAKA0001PEZZ	—	Polyethylene Bag	—

CABINET PARTS

1	CCABA2552WEV0	R	Front Cabinet Ass'y (13N-M100B)	AX
1	CCABA2552WEV2	R	Front Cabinet Ass'y (13N-M150B)	AX
1	CCABA2566WEV0	R	Front Cabinet Ass'y (CN13M10B)	AZ
1-1	<i>Not Available</i>	—	Front Cabinet	—
1-2	GCOVA0078PEKA	R	R/C Cover	AD
1-3	JBTN-0306PESA	R	Button (13N-M100B, CN13M10B)	AD
1-3	JBTN-0306PESB	R	Button (13N-M150B)	AD
2	CCABB2309WEV0	R	Rear Cabinet (13N-M100B)	AW
2	CCABB2309WEV1	R	Rear Cabinet (13N-M150B)	AW
2	CCABB2325WEV0	R	Rear Cabinet (CN13M10B)	AW

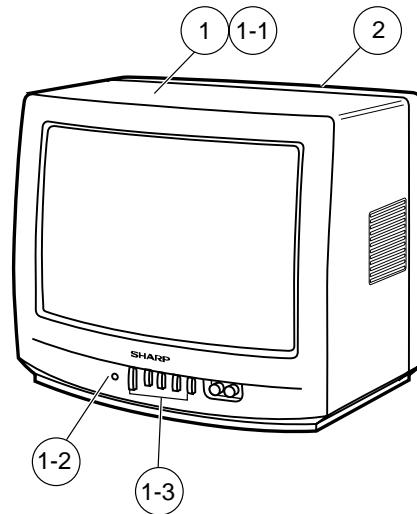

PACKING OF THE SET

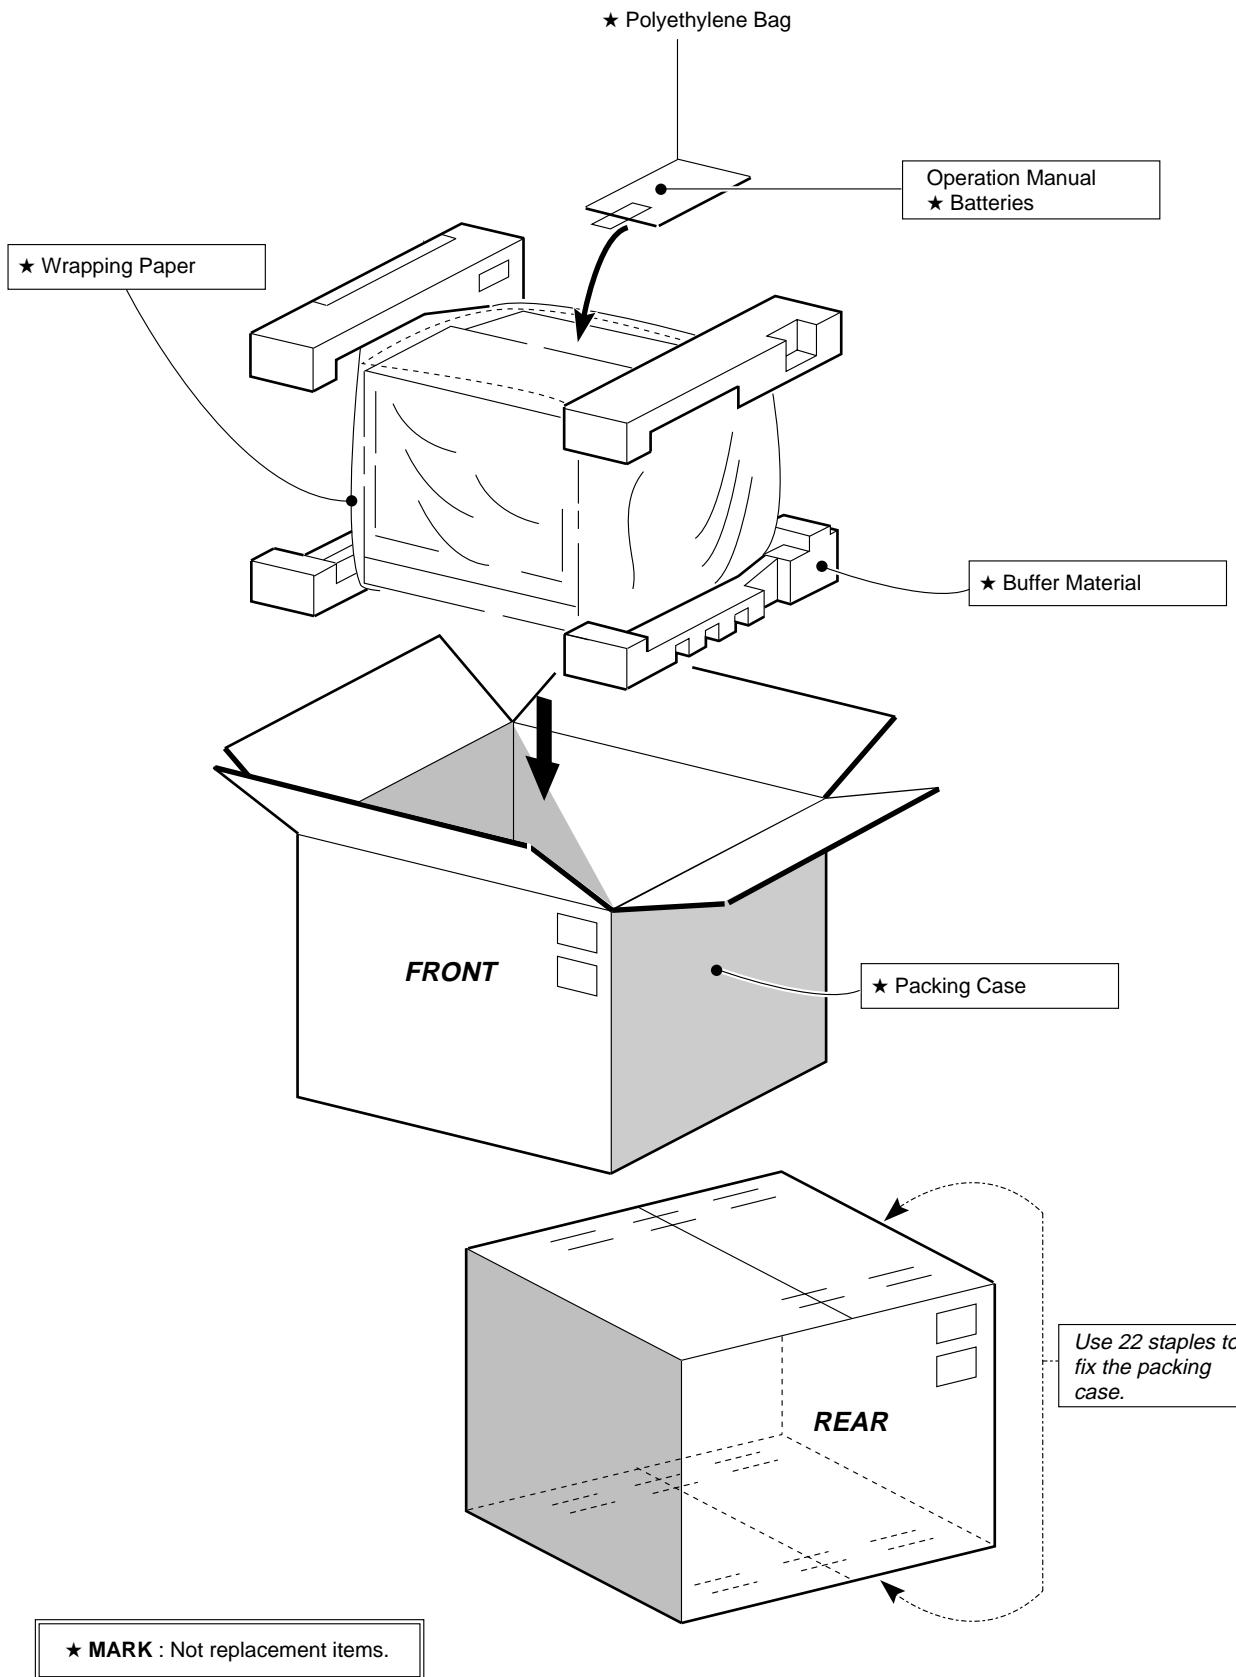

SHARP

COPYRIGHT © 2000 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

④SEM (13N-M150B)
④JAPAN ④SREC TQ1017-S
Nov. 2000 Printed in Japan
MI. KG

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan